


MAINTENANCE

Check the air suction hose between the air cleaner housing and PAIR control solenoid valve for deterioration, damage or loose connections. Make sure that the hoses are not kinked, pinched or cracked.

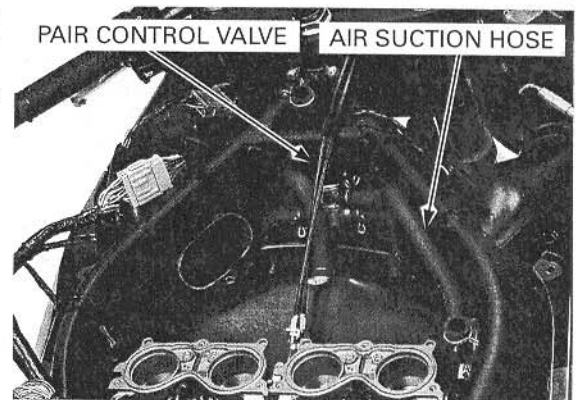


EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE ONLY)

Check the hoses between the fuel tank, EVAP canister, EVAP purge control solenoid valve for deterioration, damage or loose connectors.

Check the EVAP canister for cracks or other damage.

Refer to the Vacuum Hose Routing Diagram Label (page 1-39) and Cable & Harness Routing (page 1-33) for hose connections.

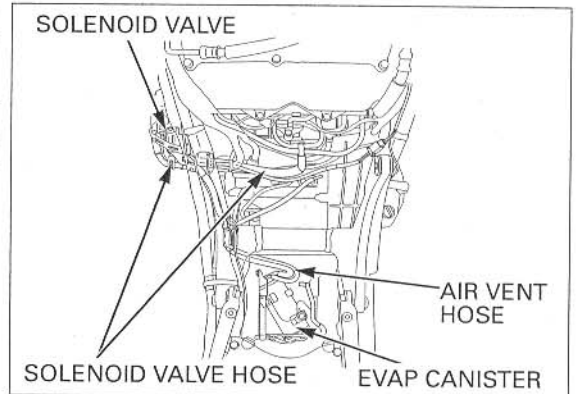

REMOVAL/INSTALLATION

Disconnect the EVAP purge control solenoid valve hose and fuel tank air vent hose. Remove the four bolts and EVAP canister.

Install the EVAP canister in the reverse order of removal.

