

## LUBRICATION SYSTEM

### OIL COOLER


#### REMOVAL

Drain the engine oil (page 4-16).

Drain the coolant from the system (page 7-6).

Remove the exhaust pipe (page 3-24).


Loosen the hose clamp screws and disconnect the oil cooler water hoses from the oil cooler.

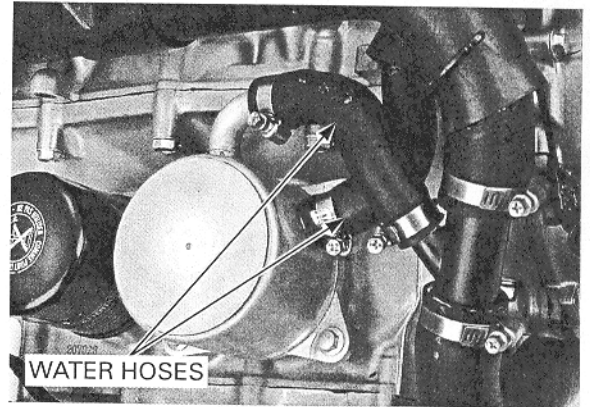

Remove the four bolts, washers and oil cooler. Remove the O-ring from the oil cooler.

#### INSPECTION

Check the oil cooler for damage.

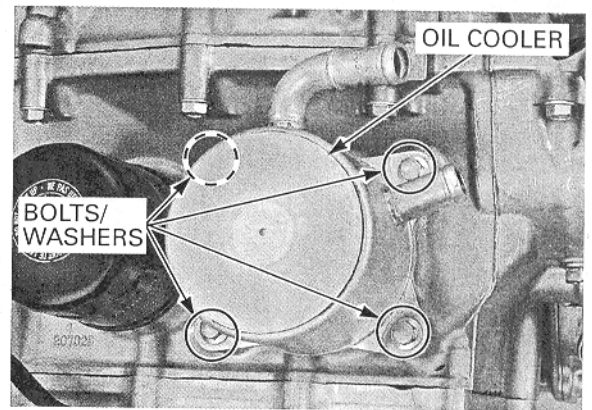

#### INSTALLATION

