

FUEL SYSTEM (Programmed Fuel Injection)

CAM PULSE GENERATOR


REMOVAL/INSTALLATION

Remove the following:


- Lower cowls (page 3-6)
- Middle cowls (page 3-7)

Lift and support the fuel tank (page 6-61).

Disconnect the cam pulse generator 2P (Natural) connector.

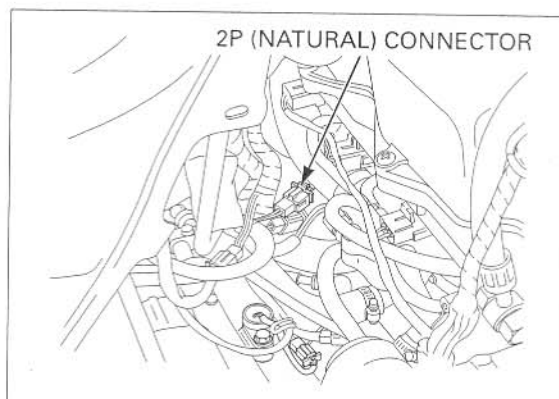


Remove the bolt, clamp and cam pulse generator from the cylinder head.

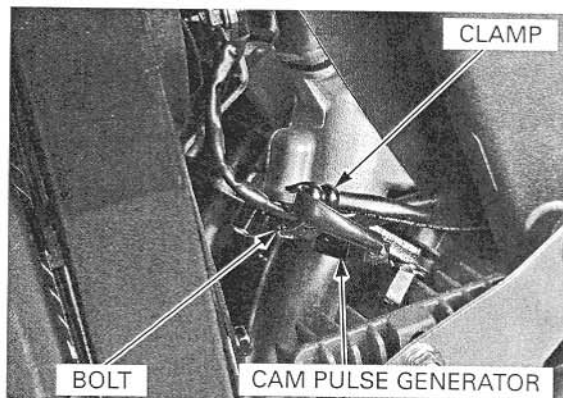

Apply oil to a new O-ring and install it onto the cam pulse generator.
Install the cam pulse generator into the cylinder head.

Tighten the mounting bolt securely.

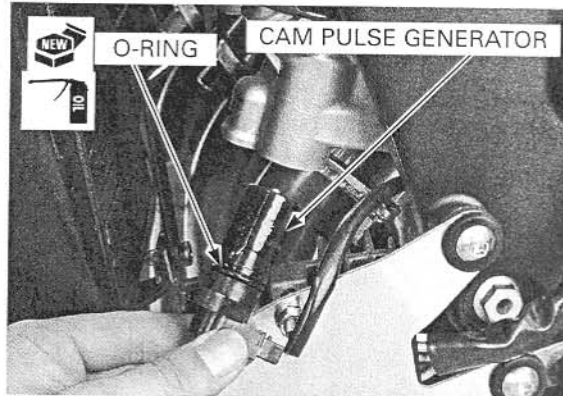

Route the cam pulse generator wire properly, connect the 2P (Natural) connector.

Install the removed parts in the reverse order of removal.

