

## ENGINE REMOVAL

Remove the following:

- Lower cowls (page 3-6)
- Middle cowls (page 3-7)
- Exhaust pipe (page 3-24)
- Fuel tank (page 6-61)
- Radiator (page 7-10)
- Radiator reserve tank (page 7-17)
- Air cleaner housing (page 6-64)
- Throttle body (page 6-72)
- Regulator/rectifier (page 17-11)

Remove the pinch bolt and disconnect the gear shift arm from the gear shift spindle.

Remove the bolt, washer, wave washer and gear shift pedal assembly.

Remove the two bolts, drive sprocket cover and guide plate.

Loosen the rear axle nut.

Turn the drive chain adjusting bolts make the drive chain slack fully.

Remove the drive sprocket special bolt, washer and drive sprocket.

Disconnect the following:

- Neutral switch connector
- Side stand switch 2P (Green) connector
- Cam pulse generator 2P (Natural) connector

