

ENGINE REMOVAL/INSTALLATION


Remove the rear engine hanger nut.




Remove the rear engine hanger lock nut using the special tool.

TOOL:
Lock nut wrench

07VMA-MBB0100 or
07VMA-MBB0101

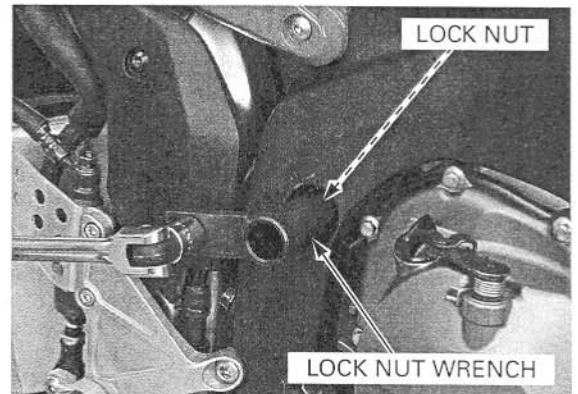

Turn the engine hanger adjusting bolt counterclockwise fully by loosening the rear engine hanger bolt.

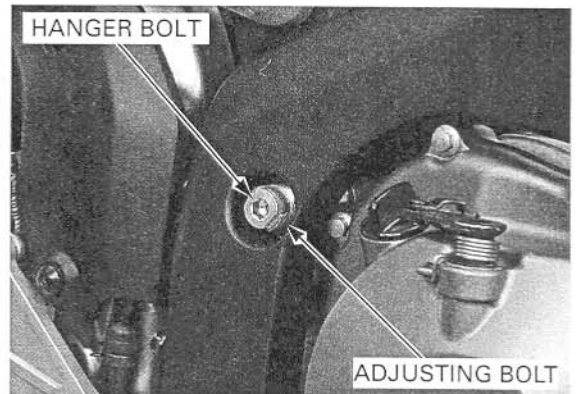

Remove the lower engine hanger nut.

