



CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE


Remove the clutch outer.

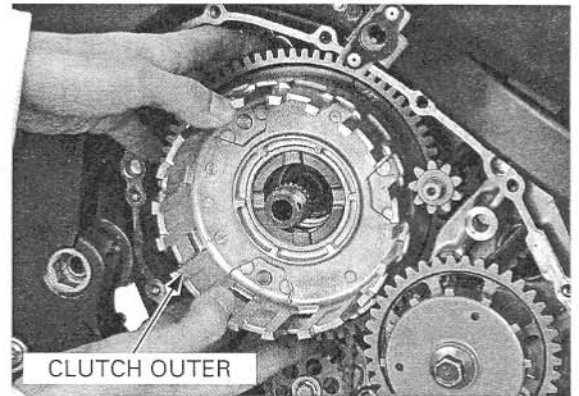

Remove the oil pump driven sprocket bolt.
Remove the oil pump drive/driven sprocket and drive chain as an assembly.

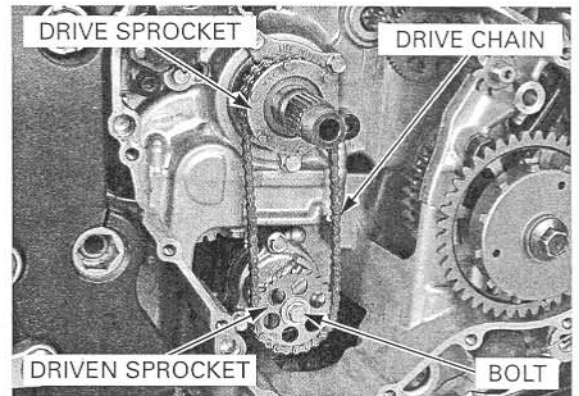

Remove the oil pump drive sprocket guide.

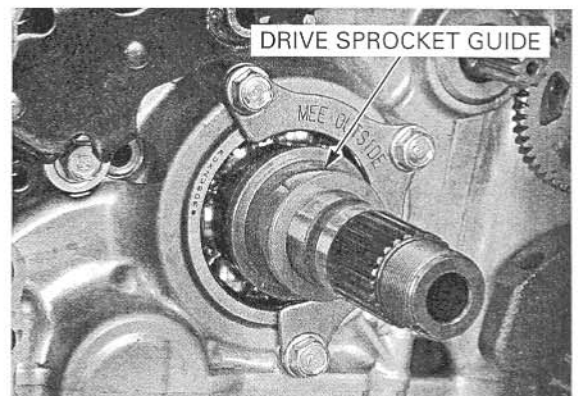

INSPECTION

Clutch lifter bearing

Turn the inner race of the lifter bearing with your finger.

The bearing should turn smoothly and freely without excessive play.

If necessary, replace the bearing.

