


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

INSPECTION

Check the gearshift spindle for wear, damage or bending.

Check the return spring for fatigue or damage.

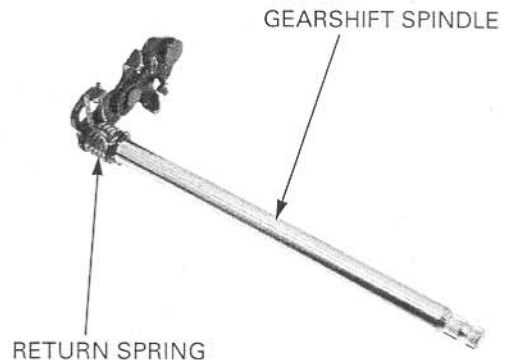


INSTALLATION

Install the following:

- Washer
- Return spring
- Stopper arm
- Pivot bolt

Tighten the stopper arm pivot bolt to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

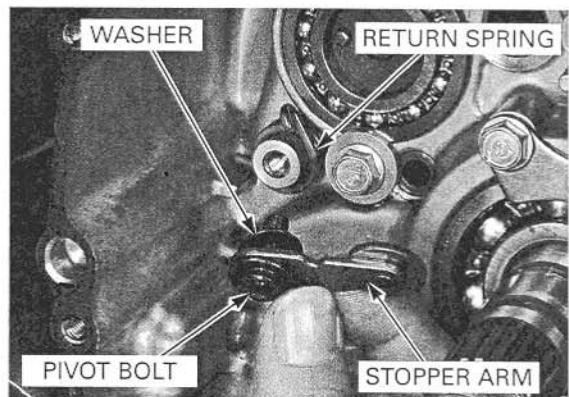

Install the dowel pin onto the shift drum.

Align the dowel pin on the shift drum with the wide groove on the gearshift cam.

Install the gearshift cam while holding the stopper arm using a screwdriver as shown.

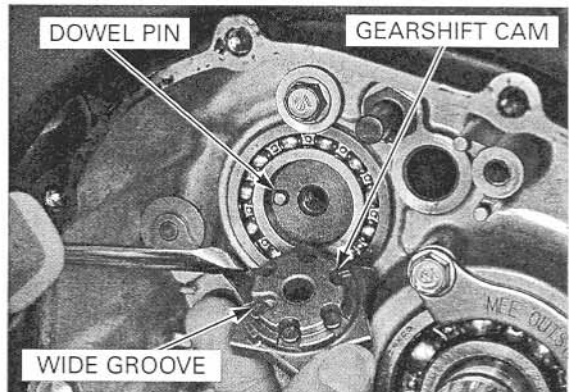

Apply a locking agent to the shift drum center socket bolt threads.

Tighten the socket bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

