


ALTERNATOR


Remove the flywheel using the special tool.

TOOL:
Rotor puller

07733-0020001 or
07933-3950000
(U.S.A. only)

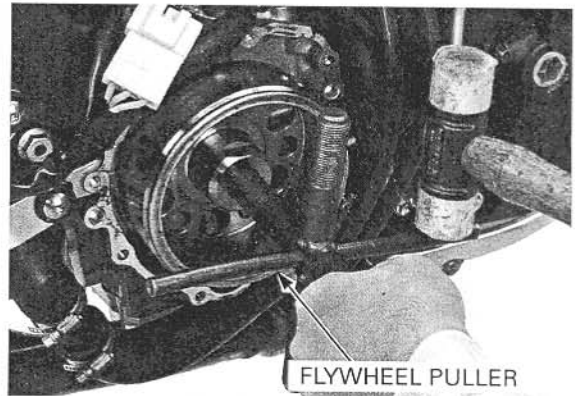


Remove the woodruff key from the crankshaft.

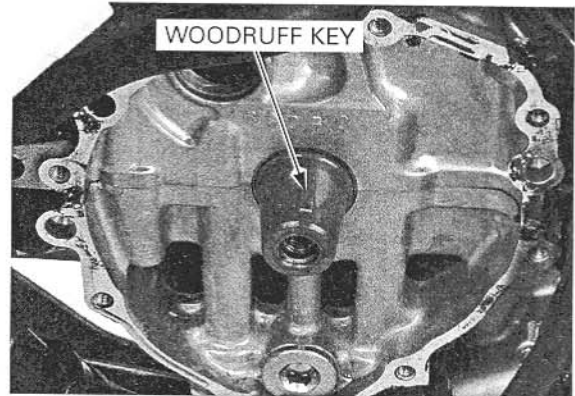

INSTALLATION

Clean any oil from the crankshaft taper.
Install the woodruff key into the groove of the crankshaft.

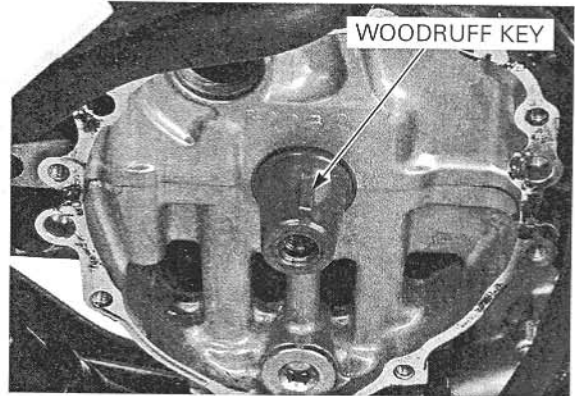

Install the flywheel aligning the key way in the flywheel with the woodruff key on the crankshaft.

