


ALTERNATOR

The alternator cover (stator) is magnetically attached to the flywheel, be careful during installation.

Install the alternator cover.

Install and tighten the SH bolts securely.

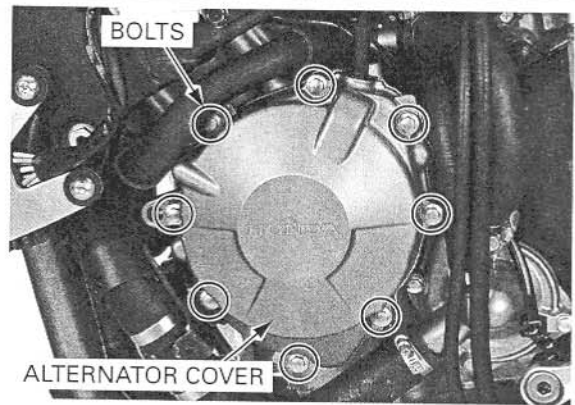

Connect the alternator 3P (Natural) connector.

Install the following:

- Middle cowls (page 3-8)
- Lower cowls (page 3-6)

