


FRONT WHEEL/SUSPENSION/STEERING


Loosen the fork bottom pinch bolts and remove the fork tube from the fork top bridge and steering stem.

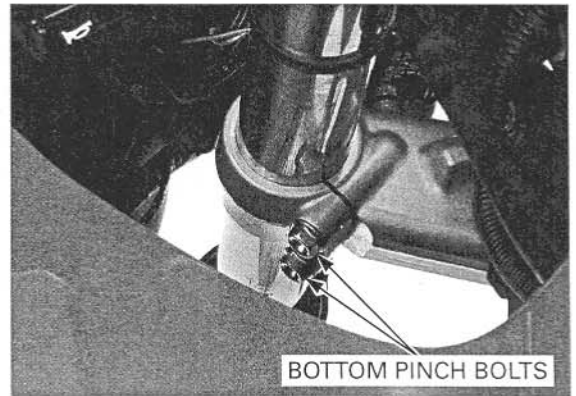

DISASSEMBLY

Be careful not to scratch the fork tube or damage the dust seal.

Remove the fork protector by prying it carefully using a screwdriver.

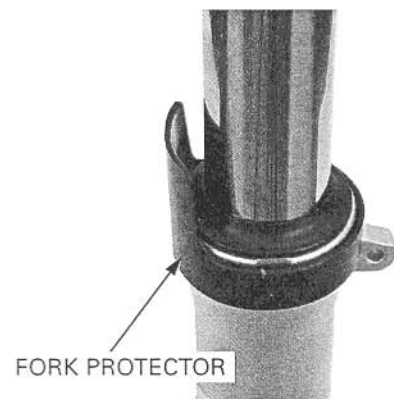

Remove the fork bolt from the fork tube.



Push down the spring joint plate and install the 14 mm wrench onto the rebound adjuster.

Do not remove the rebound damping adjuster from the damper rod, or fork damping force will be changed.

Hold the rebound adjuster, then loosen and remove the fork bolt from the rebound adjuster.

