



REAR WHEEL/SUSPENSION


Remove the shock arm bolt/nut (swingarm side).

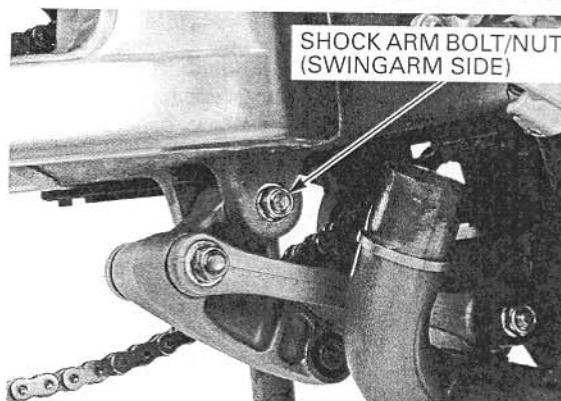

Remove the bolt and disconnect the gearshift arm from the gearshift spindle.

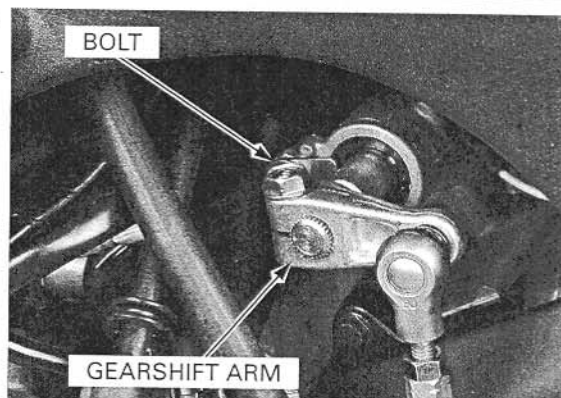

Remove the bolts, spacer and drive sprocket cover.

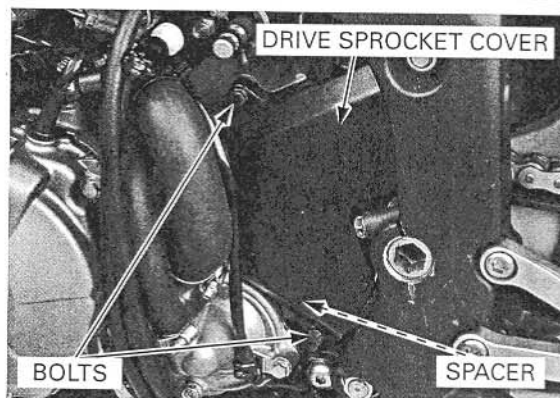

Remove the bolt, washer and drive sprocket.

