


HYDRAULIC BRAKE

Tighten the caliper mounting bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Tighten the pad pin to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

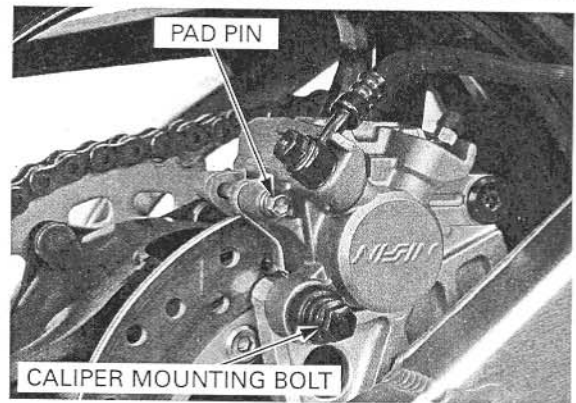

BRAKE DISC INSPECTION

Visually inspect the brake discs for damage or cracks.


Measure the brake disc thickness with a micrometer.

SERVICE LIMITS:

FRONT: 3.5 mm (0.14 in)

REAR: 4.0 mm (0.16 in)

Replace the brake disc if the smallest measurement is less than the service limit.

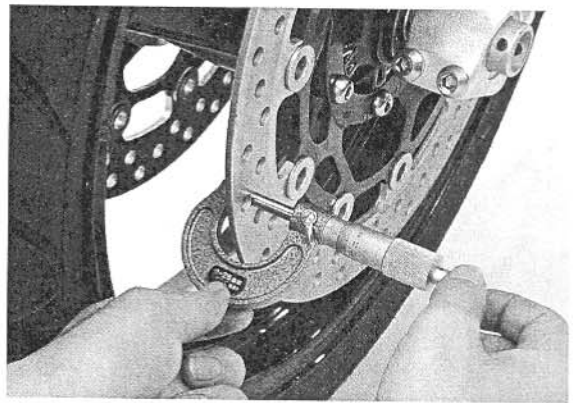

Measure the brake disc warpage with a dial indicator.

SERVICE LIMITS:

FRONT: 0.30 mm (0.0012 in)

REAR: 0.30 mm (0.0012 in)

Check the wheel bearings for excessive play (page 14-13), if the warpage exceeds the service limit. Replace the brake disc if the wheel bearings are normal.

