

HYDRAULIC BRAKE

REAR MASTER CYLINDER


NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

REMOVAL

Drain the rear hydraulic system (page 16-6).


Remove the rear master cylinder reservoir mounting bolt.

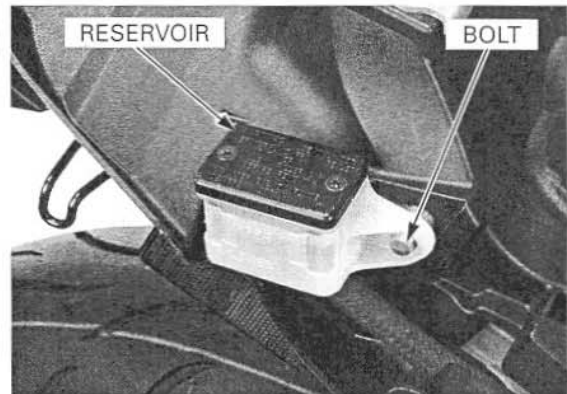

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joint.

Remove the rear master cylinder mounting bolts and master cylinder guard plate.

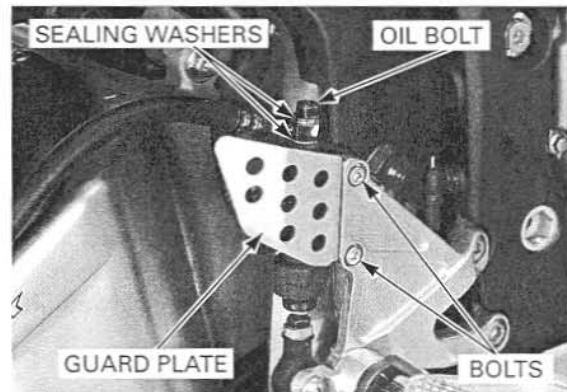

Remove and discard the brake pedal joint cotter pin. Remove the bolt, nut, washers and rear master cylinder from the right driver footpeg bracket.

