

FUEL SYSTEM

Throttle Valve and Choke Lever

Inspect throttle cable condition, damage and thread

Inspect the throttle grip slides around handle properly.

Inspect the play between the throttle grip and throttle grip flange

Play : 2-6mm

Main adjustment can be done at the carburettor.

Remove fuel tank (4-2)

Loosen the pull through throttle cable lock nut, and turn adjuster.

Final adjustment can be done at the handle bars.

Loosen the lock nut and turn the adjuster Even with adjustment using adjuster, if the play is not taken up or operation is not smooth the replace the cable.

Inspect the choke cable condition, damage and thread

inspect for smooth operation from a fully closed to fully open position.

