

2. FRAME/BODY PANELS/EXHAUST SYSTEM

SERVICE INFORMATION	2-1	FRONT FAIRING	2-3
TROUBLESHOOTING	2-1	ENGINE UNDER COVER	2-4
SEAT	2-2	FUEL TANK	2-4
SEAT COWL	2-2	EXHAUST SYSTEM	2-5

SERVICE INFORMATION

GENERAL

⚠WARNING

- *Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.*
- *Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.*

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.
- This section covers removal and installation of the body panels, fuel tank and exhaust system.
- Always replace the exhaust pipe gasket when removing the exhaust pipe from the engine.
- Always inspect the exhaust system for leaks after installation.

TORQUE VALUES

Exhaust pipe joint nut	12 N·m (1.2 kgf·m , 9 lbf·ft)
Muffler band bolt	26 N·m (2.7 kgf·m , 20 lbf·ft)

TROUBLESHOOTING

Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leaks

Poor performance

- Deformed exhaust system
- Exhaust gas leaks
- Clogged muffler