


MAINTENANCE

FUEL LINE

Check the fuel line and replace any cracked, damaged or leaking parts.

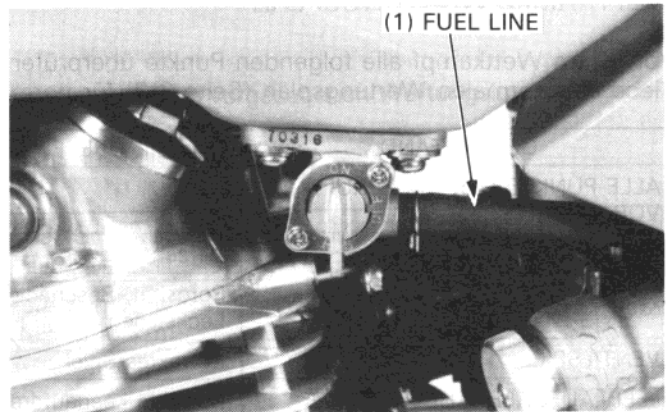

FUEL STRAINER SCREEN

Turn the fuel valve to OFF and disconnect the fuel line at the carburetor.

Turn the fuel valve to ON then RES, and drain the fuel into a clean container.


⚠ WARNING

- *Keep gasoline away from flames or sparks. Wipe up spilled gasoline at once.*

Remove the two bolts attaching the fuel valve to the fuel tank then remove the fuel filter.

Clean the fuel strainer screen.

Make sure the O-ring is in good condition and install the fuel valve. Tighten the bolts securely and reconnect the fuel line. After filling the fuel tank, check for leaks.

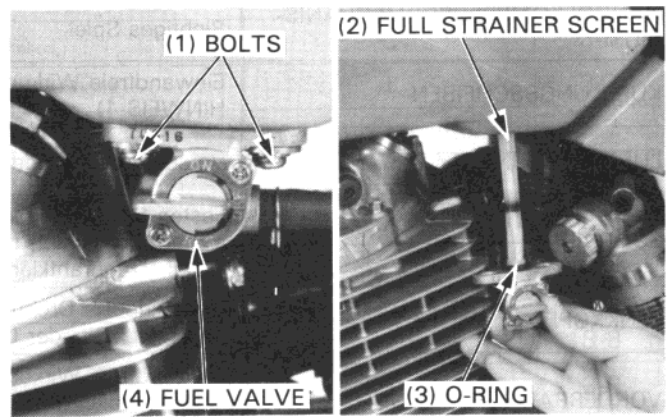

THROTTLE OPERATION

Check for smooth throttle grip full opening and automatic full closing in all steering positions.

Make sure there is no deterioration, damage, or kinking in the throttle cables, and that the throttle grip free play is 2–6 mm (1/8–1/4 in) at the throttle grip flange.

Throttle grip free play can be adjusted at either end of the throttle cable. Replace any damaged parts before beginning this adjustment.

Minor adjustments are made with the upper adjuster. Adjust free play by loosening the lock nut and turning the adjuster after sliding the rubber cover off. Tighten the lock nut and recheck throttle operation.

