

MAINTENANCE

Inspect the chain guide slider for wear and replace it if you can see the chain through the wear limit opening.




BRAKE FLUID

Check the front brake fluid reservoir level. If the level is near the lower level mark, remove the cover and diaphragm. Fill the reservoir with DOT-4 Brake Fluid.

CAUTION

- Do not remove the cover until the handlebar has been turned so that the reservoir is level.
- Avoid operating the brake lever with the cap removed. Brake fluid will squirt out if the lever is pulled.
- Do not allow dirt or other contaminants to get into the reservoir.

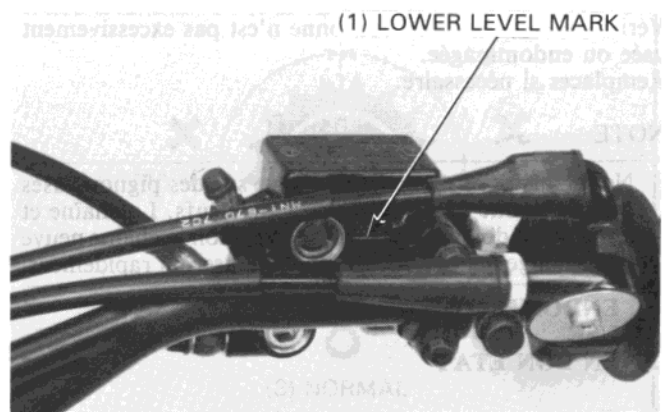

If the level was low, check the entire system for leaks.

Refer to section 14 for the brake bleeding procedure.

Inspect the brake hoses and fittings for deterioration, cracks and signs of leakage. Tighten any loose fittings.

Replace hoses and fittings as required.


BRAKE SHOE/PAD WEAR

BRAKE PAD WEAR

Check the brake pads for wear. Replace the brake pads if the wear line on the pads reaches the edge of the brake disc (page 14-5).

CAUTION

- Always replace the brake pads as a set to ensure even disc pressure.

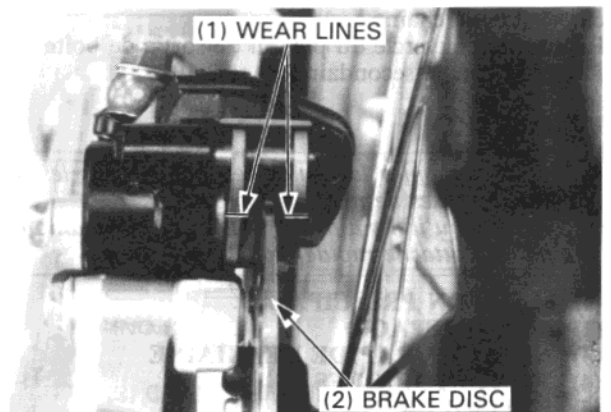

BRAKE SHOE WEAR

Replace the brake shoes if the arrow on the brake arm aligns with the "Δ" reference mark on the brake panel when the brake is applied.

