


MAINTENANCE

NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (section 1) at the intervals shown in the Maintenance Schedule (pages 3-3, and 3-4).

Check all cotter pins, safety clips, hose clamps and cable stays.

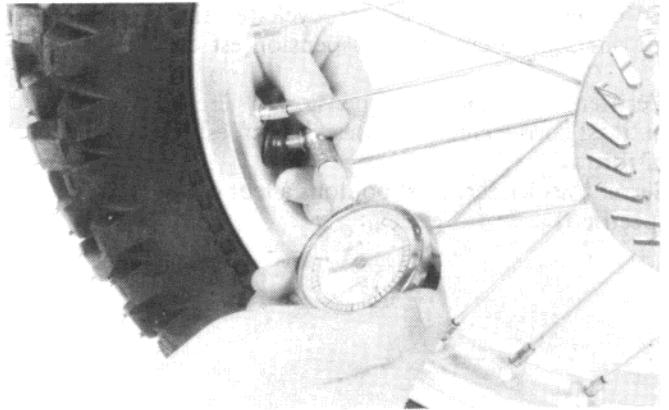

WHEEL/SPOKES

TIRE PRESSURE

NOTE

- The pressure should be checked when the tires are COLD.

Tire pressure:

Front: 15 psi (100 kPa, 1.0 kg/cm²)

Rear: 15 psi (100 kPa, 1.0 kg/cm²)

Tire size:

	B model	U model
Front	80/100-21 51M	3.00-21-4PR
Rear	110/100-18 64M	4.50-18-4PR

Check the tires for cuts, embedded nails or other sharp objects.

Check the tire cleat depth.



SERVICE LIMIT: 3 mm (1/8 in)

Tighten the wheel spokes and rim lock.

TORQUE VALUES:

SPOKE NIPPLE: 4 N·m (0.4 kg-m, 3 ft-lb)

RIM LOCK: 13 N·m (1.3 kg-m, 9 ft-lb)

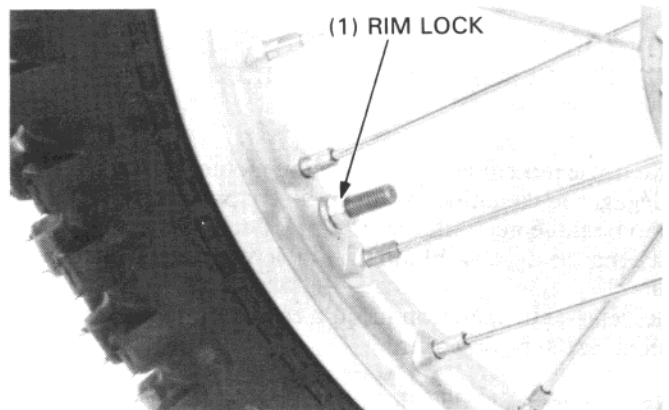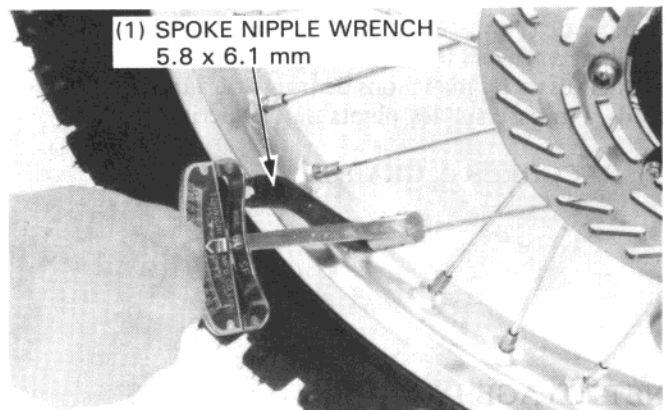

STEERING HEAD BEARINGS

Raise the front wheel off the ground and check that the handlebar rotates freely. Check that the control cables do not interfere with handlebar rotation. If the handlebar moves unevenly, binds, or has vertical movement, adjust the steering head adjusting nut (page 12-21).

