

FUEL SYSTEM

Remove the main jet, needle jet holder, needle jet and slow jet.

Turn the pilot screw in and carefully count the number of turns before it seats lightly. Make a note of this to use as a reference when reinstalling the pilot screw.

CAUTION



- *Damage to the pilot screw seat will occur if the pilot screw is tightened against the seat.*

Remove the pilot screw and inspect it. Replace it if it is worn or damaged.

Check each part for wear or damage.
Blow open all jets with compressed air.


FLOAT CHAMBER ASSEMBLY

Assemble the float chamber components in the reverse order of disassembly.

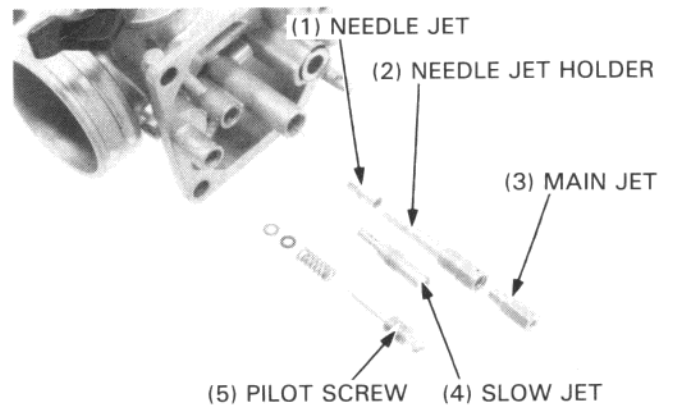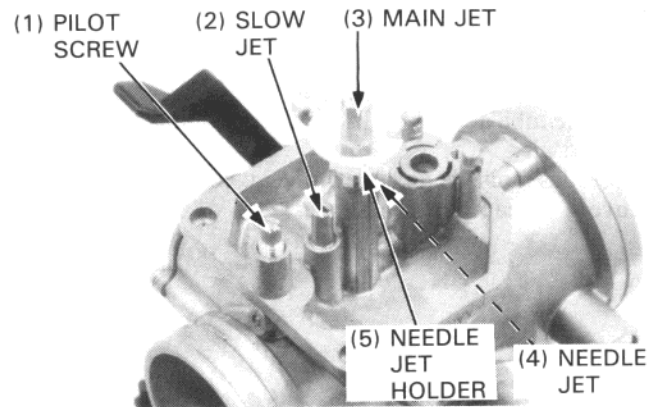

THROTTLE VALVE

Remove the two screws attaching the carburetor top cover and the body.

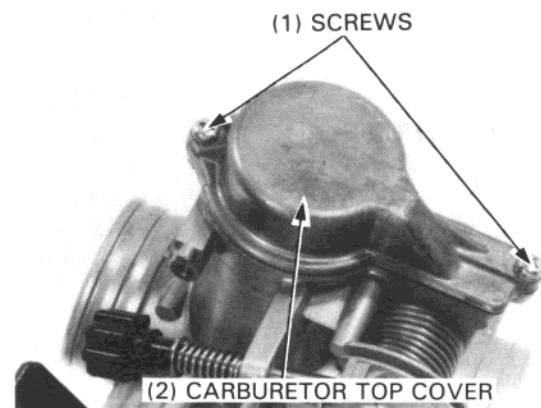

Remove the link arm set screw, the throttle drum assembly, the plastic washer and throttle valve assembly from the throttle bore.

