



ENGINE REMOVAL/INSTALLATION

Remove the spark plug cap.

Disconnect the oil tank breather tube at the cylinder head.
Disconnect the manual decompressor cable from the valve lifter lever.

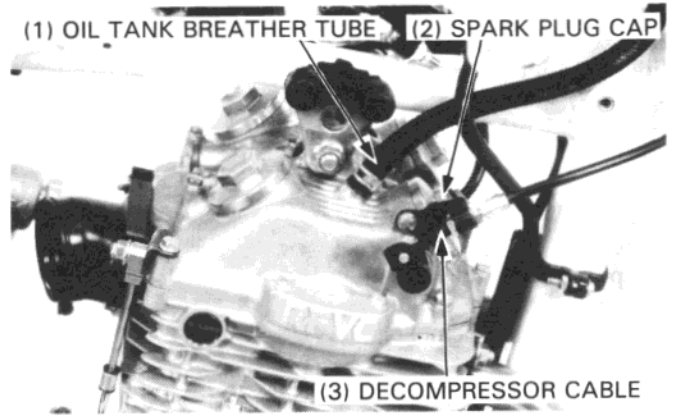


Disconnect the pulse generator wire coupler.

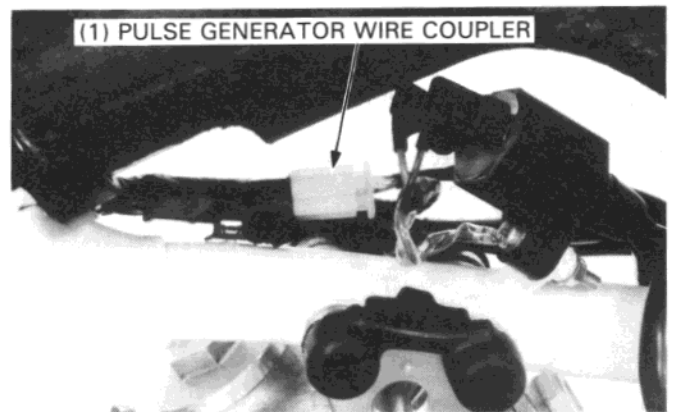

Remove the drive sprocket cover and drive chain protector.

Loosen the rear axle nut and turn the drive chain adjusters to loosen the chain.

Remove the drive sprocket and the drive chain.

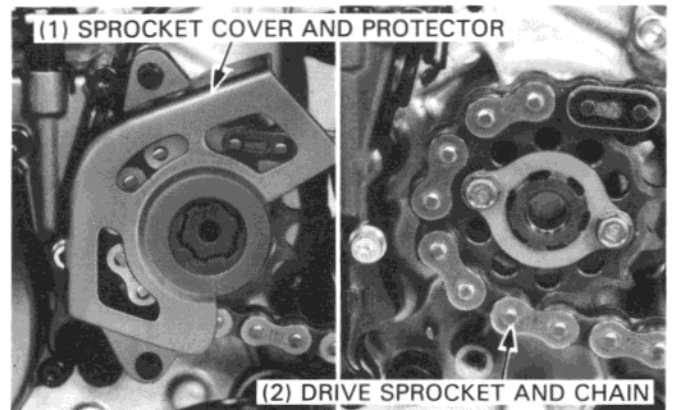

Disconnect the crankcase breather hose from the crankcase.

