



## CLUTCH/KICK STARTER

Remove the pulse generator rotor.

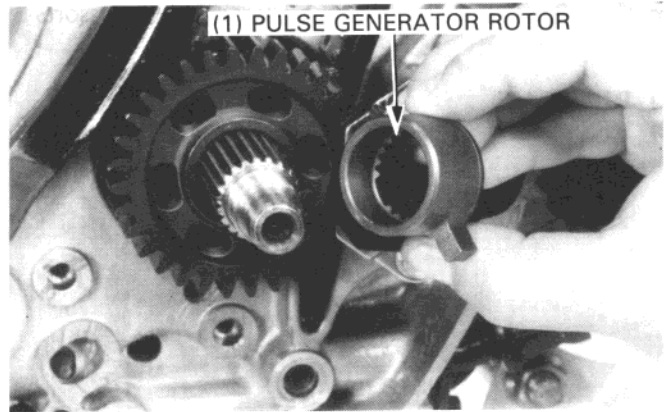

Remove the pulse generator and primary drive gear.

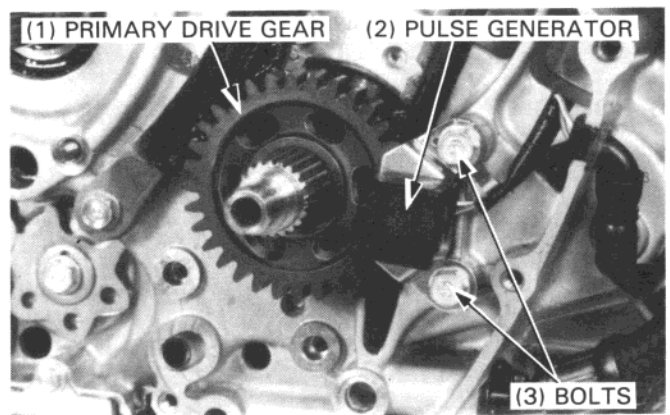


## INSTALLATION

Install the primary drive gear over the crankshaft.

### NOTE

- The primary drive gear, pulse generator rotor, and oil pump drive gear will only go on in one position because of the extra wide aligning spline.

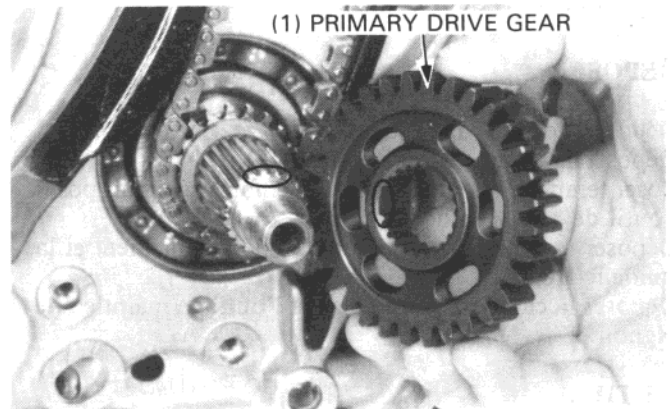

Install the pulse generator and pulse generator rotor.

