



CLUTCH/KICK STARTER

Remove the flange bushing.

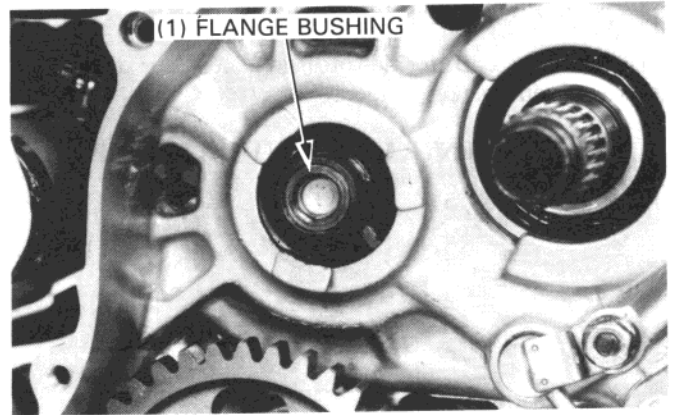


Temporarily install the kick starter lever on the kick starter shaft and rotate the shaft counterclockwise, until the ratchet tab is clear of the kick starter ratchet guide.

At this position pull the kick starter assembly out so that the ratchet clears the ratchet guide, then return the kick starter. Remove the kick starter return spring from the hook. Unhook the kick starter assembly.

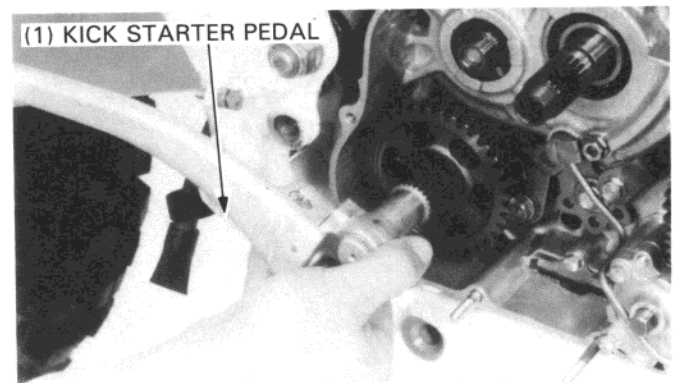

DISASSEMBLY

Remove the collar, return spring, spring seat, ratchet spring and ratchet from the spindle.

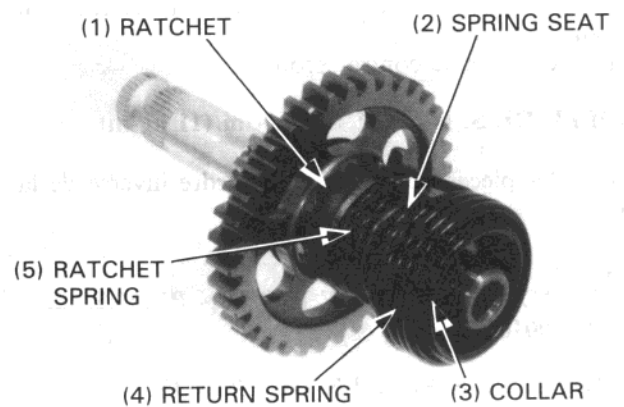

Remove the circlip, bushing, starter gear and washer from the spindle.

