


TRANSMISSION


TRANSMISSION ASSEMBLY

Check the gears for freedom of movement or rotation on the shaft.

Check that the snap rings are seated in the grooves.

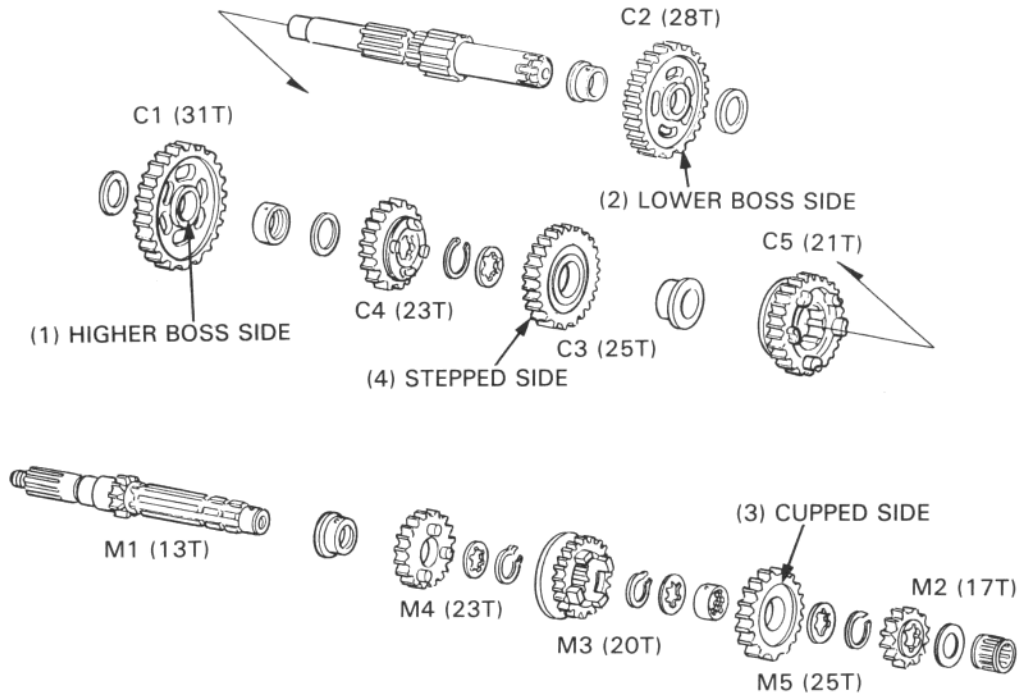

Align the hole in the M5 gear bushing with the hole in the mainshaft when installing.

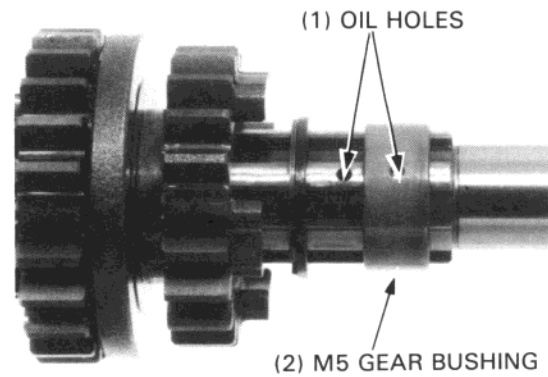

Install the mainshaft and countershaft into the left crankcase together.

