


FRONT WHEEL/SUSPENSION/STEERING

Install the left handlebar switch by aligning the pin with the hole, and tighten the bolts (B model) or nuts (U model).

Adjust the following:


- the manual decompressor cable (page 3-8)
- the clutch (page 3-14)
- the throttle cable (page 3-5)

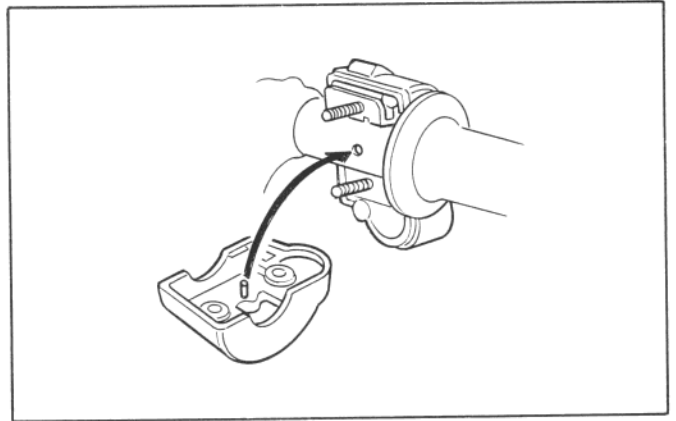


FRONT WHEEL

REMOVAL

Raise the front wheel off the ground by placing a box or work stand under the engine.
Disconnect the tripmeter cable from the speedometer gearbox at the front wheel.

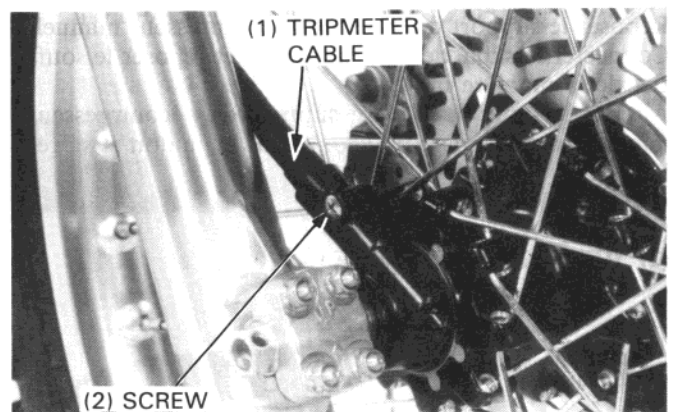

Remove the axle shaft holder nuts and then remove the front axle.
Remove the front wheel.

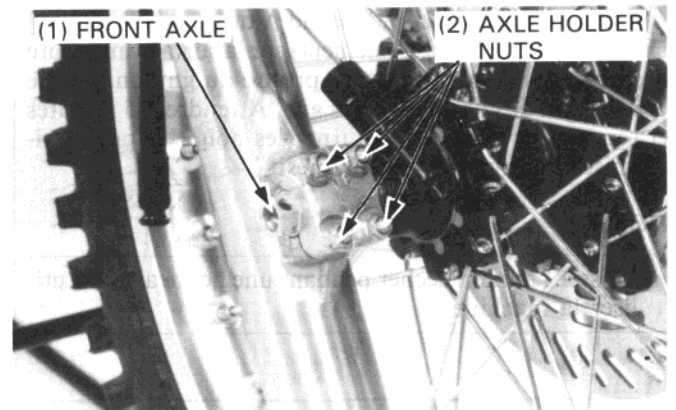

INSPECTION

AXLE

Set the axle in V blocks and measure the runout.
The actual runout is 1/2 of the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

