


REAR WHEEL/BRAKE/SUSPENSION

Install the special washer by aligning its groove with the tab on the brake panel.

Apply grease to the anchor pins and brake cam, and install the cam.

⚠ WARNING

- *Contaminated brake linings reduce stopping power. Keep grease off the brake linings. Wipe any excess grease off the cam.*

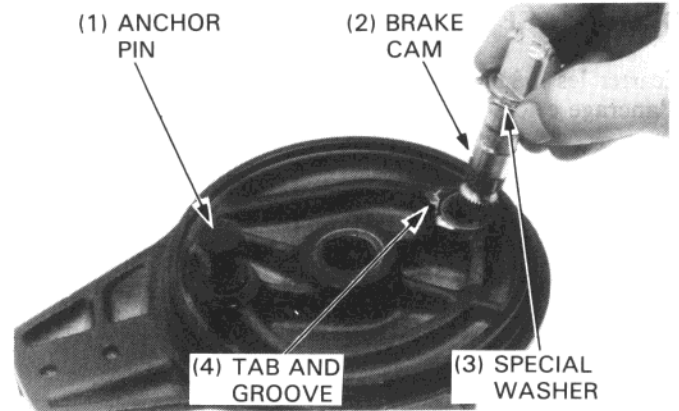


Align the wear indicator tab with the cutout in the brake cam and install the indicator over the cam.

Install the brake arm aligning the punch mark with the cam punch mark.

Tighten the brake arm bolt.

TORQUE: 10 N·m (1.0 kg·m, 7 ft·lb)

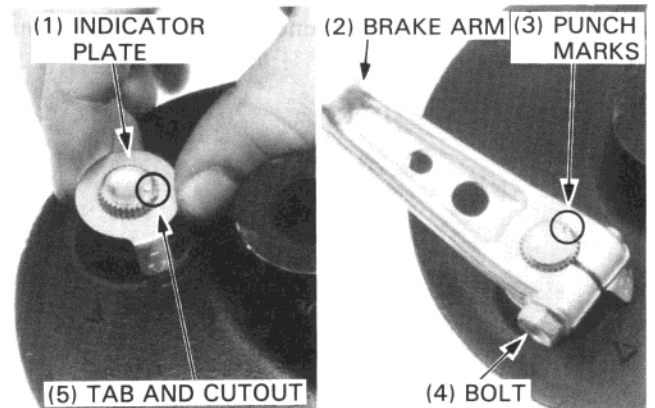

Reinstall the brake shoes in their original positions.
Install the springs.

Install the brake panel on the rear wheel and then install the rear wheel (page 13-8).

