


REAR FENDER/EXHAUST PIPE


REAR FENDER

REMOVAL

Remove the seat and the left side cover.
Disconnect the taillight wire connectors and unhook the tail/stop light wire from the clamp.

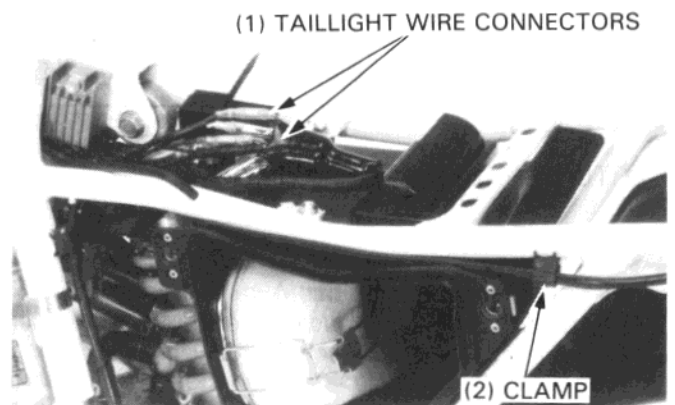

Remove the number plate bracket stay bolts.

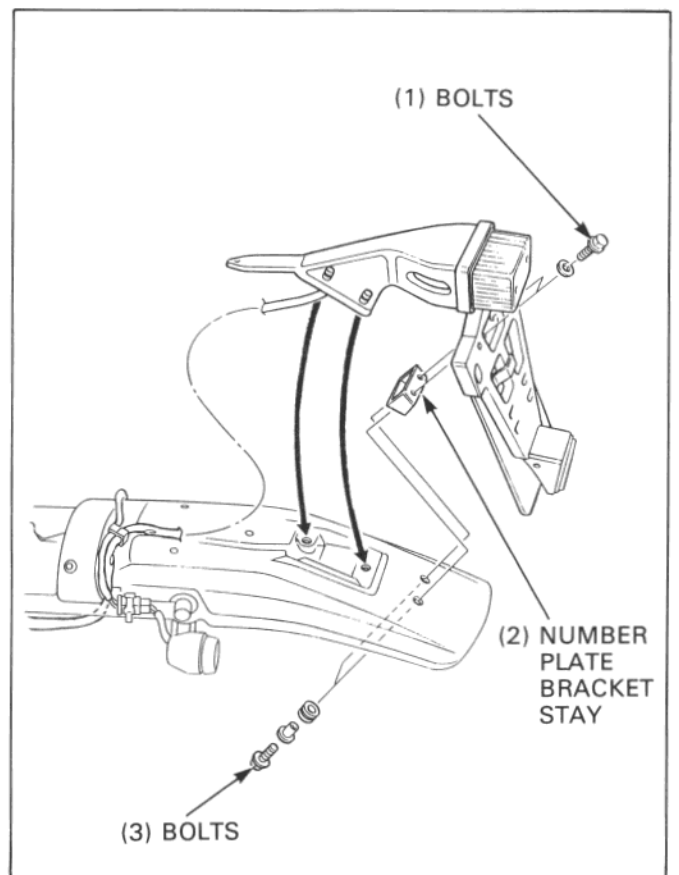

Pull out the tail/stop light rubber from the rear fender.

Remove the two nuts that retain the seat, then remove the seat.

