

ELECTRICAL SYSTEM

HANDLEBAR SWITCH

Disconnect the 6P mini coupler of the lighting/dimmer/horn switches.

Continuity should exist between the color coded wires on each chart.

LIGHTING SWITCH

Terminal	B	TL	HL	CI
●				
P	○—○			
H	○—○		○—○	
Color	B	Br	●	W/Y

DIMMER SWITCH

Terminal	HI	HL	LO
H	○—○		
(N)	○—○—○		
L		○—○	
Color	L	●	W

HORN SWITCH

Terminal	HO	B
FREE		
PUSH	○—○	
Color	Lg	B

TURN SIGNAL SWITCH (U model only)

Terminal	W	L	R
L	○—○		
(N)			
R	○—○—○		
Color	Gr	O	Lb

ENGINE STOP SWITCH

Remove the headlight mounting bolts (B model).
 Unhook the headlight straps (U model).
 Disconnect the engine stop switch terminals.
 Check the switch for continuity between the black/white and black wire connectors.

	BI/ V	BI
PUSH	○—○	○—○
FREE		

