

2. FRAME/BODY PANELS/EXHAUST SYSTEM

SERVICE INFORMATION	2-1	FRONT VISOR	2-3
TROUBLESHOOTING	2-1	REAR FENDER/MUD GUARD	2-4
SEAT	2-2	FUEL TANK	2-5
SIDE COVERS	2-2	SUB-FRAME	2-5
RADIATOR SHROUD	2-2	EXHAUST PIPE/MUFFLER	2-8
FRONT FENDER	2-3	SKID PLATE	2-11

SERVICE INFORMATION

GENERAL

▲ WARNING

- Gasoline is extremely flammable and is explosive under certain condition. KEEP OUT OF REACH OF CHILDREN.
- Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.
- This section covers removal and installation of the body panels, fuel tank and exhaust system.
- Always replace the exhaust pipe gaskets after removing the exhaust pipe from the engine.
- When installing the exhaust system, loosely install all of the exhaust pipe fasteners. Always tighten the exhaust clamps first, then tighten the mounting fasteners. If you tighten the mounting fasteners first, the exhaust pipe may not seat properly.
- Always inspect the exhaust system for leaks after installation.

TORQUE VALUES

Exhaust pipe joint nut	18 N·m (1.8 kgf·m , 13 lbf·ft)
Exhaust pipe clamp bolt	20 N·m (2.0 kgf·m , 14 lbf·ft)
Muffler clamp bolt	20 N·m (2.0 kgf·m , 14 lbf·ft)
Muffler mounting bolt	32 N·m (3.3 kgf·m , 24 lbf·ft)
Exhaust pipe protector bolt	12 N·m (1.2 kgf·m , 9 lbf·ft)

TROUBLESHOOTING

EXCESSIVE EXHAUST NOISE

- Broken exhaust system
- Exhaust gas leak

POOR PERFORMANCE

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler