

FUEL TANK

REMOVAL/INSTALLATION

⚠ WARNING

Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.


Remove the seat (page 2-2).

Disconnect the breather tube from the stem nut. Turn the fuel valve OFF, and disconnect the fuel line.

Remove the radiator shroud bolts.
Remove the fuel tank mounting bolts.
Unhook the band and remove the fuel tank.

Installation is in the reverse order of removal.

After installation, make sure there are no fuel leaks.

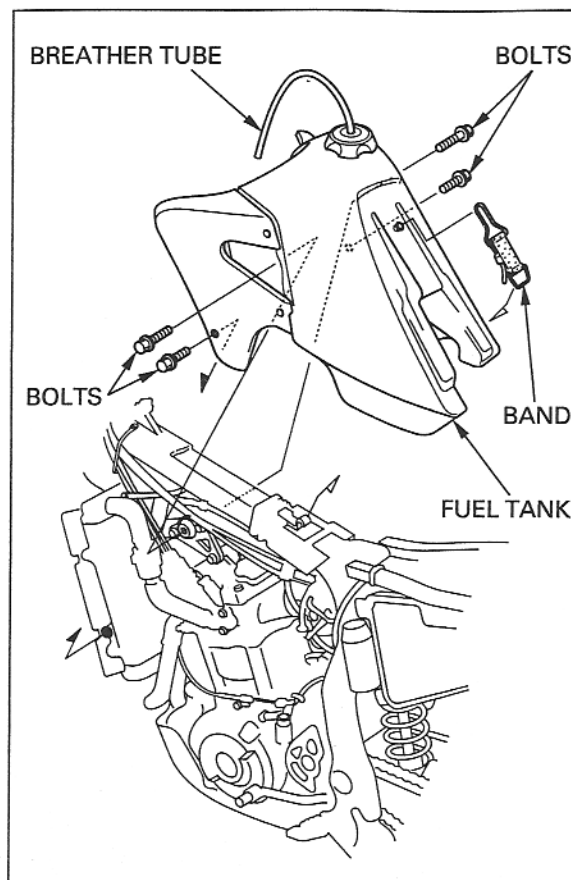

SUB-FRAME

REMOVAL

Remove the following:

- Seat (page 2-2)
- Right side cover (page 2-2)

Disconnect the crankcase breather tube from the air cleaner housing.

Remove the ignition control module from the air cleaner housing.

Remove the wire band and disconnect the taillight connectors and AC regulator connectors.

Remove the bolt and rear brake reservoir. Loosen the bolt and free the reservoir hose from the clamp.

