



Remove the radiator mounting bolts and swing the radiators forward (page 6-8).


Loosen the left exhaust pipe clamp bolt.

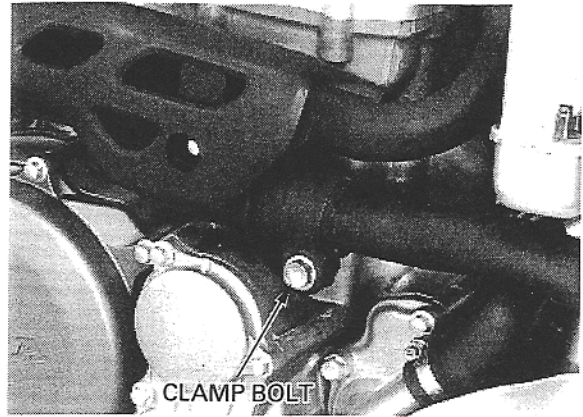

Remove the joint nuts and left exhaust pipe.

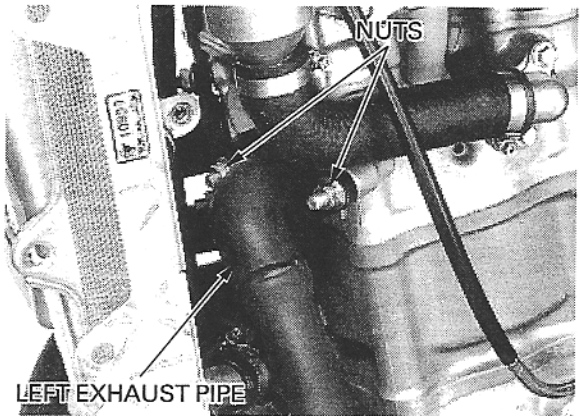

Remove the joint nuts and right exhaust pipe.

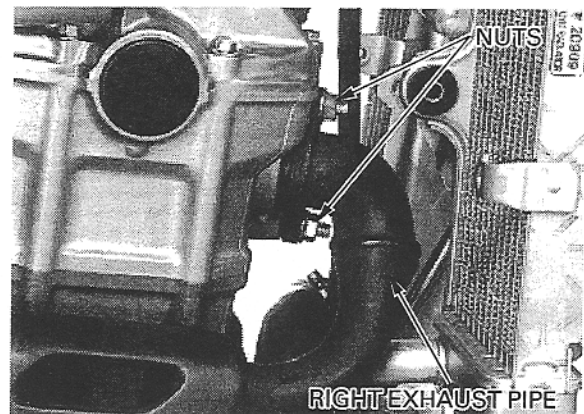

Remove the gaskets.

