



INSTALLATION

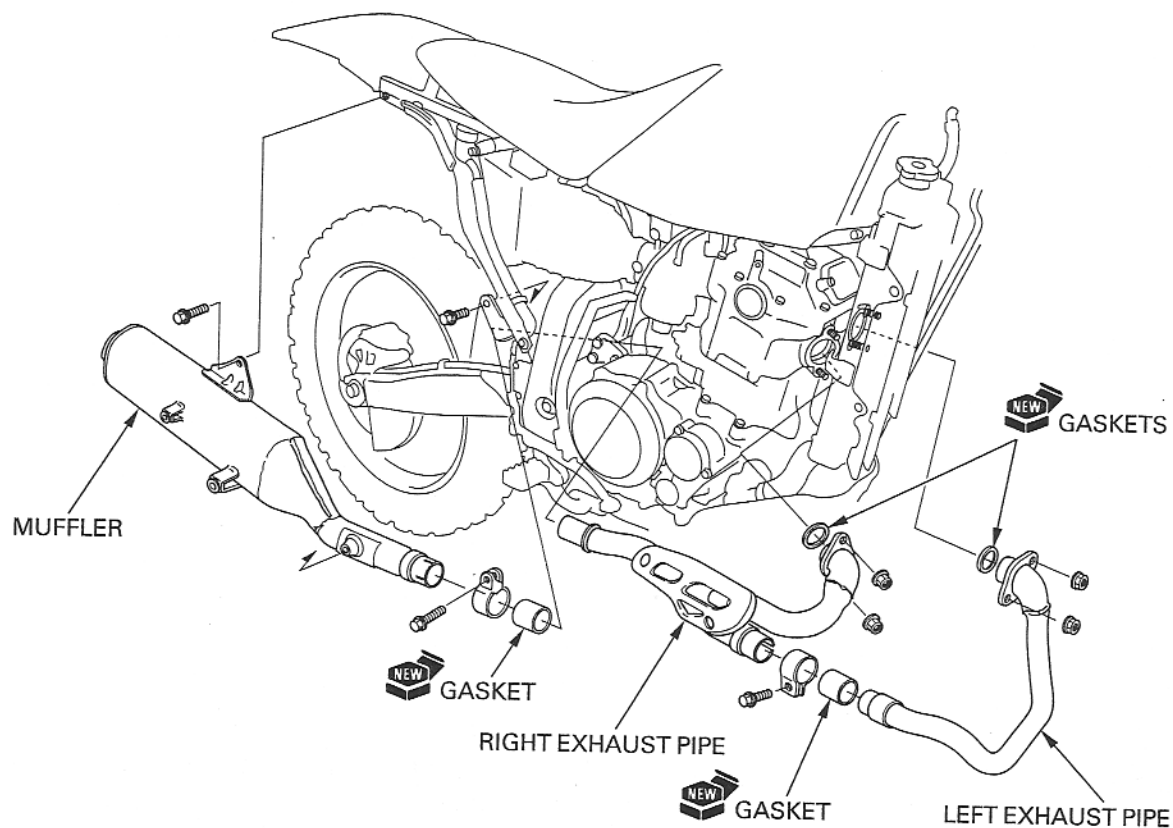

Install the new gaskets into the cylinder head.

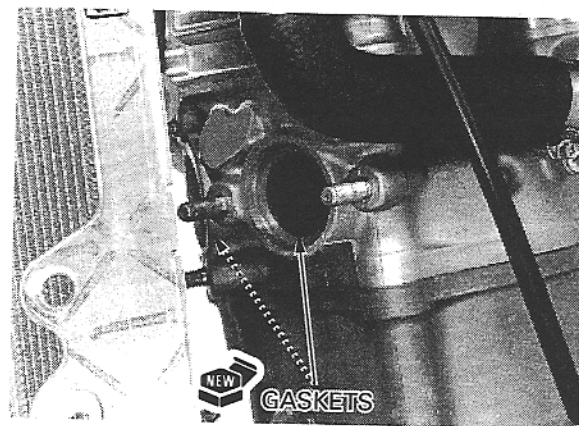

Install the exhaust pipes and muffler.

NOTE:

Loosely install all of the exhaust pipe/muffler fasteners. Always tighten the exhaust pipe joint nuts first, then tighten the mounting fasteners. If you tighten the mounting fasteners first, the exhaust pipe may not seat properly.

Tighten the exhaust pipe joint nuts to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

