


MAINTENANCE


ENGINE OIL FILTER

Drain the engine oil (page 3-10).
Remove the bolts and oil filter cover.

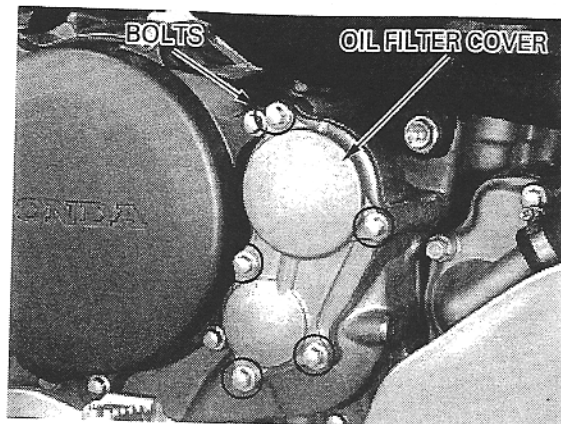

Remove the oil filter and spring.
Remove the O-ring from the oil filter cover.


Check the oil filter is in good condition, replace it if necessary.

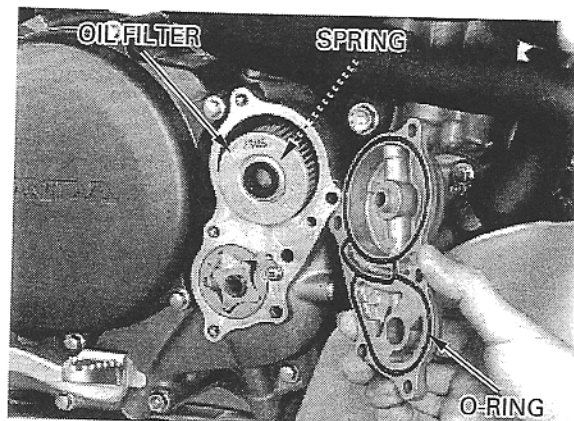

Apply engine oil to a new O-ring and install it to the oil filter cover.
Install the spring.
Install the oil filter with its "OUT SIDE" mark facing out.

CAUTION:

Installing the oil filter backwards will result in severe engine damage.

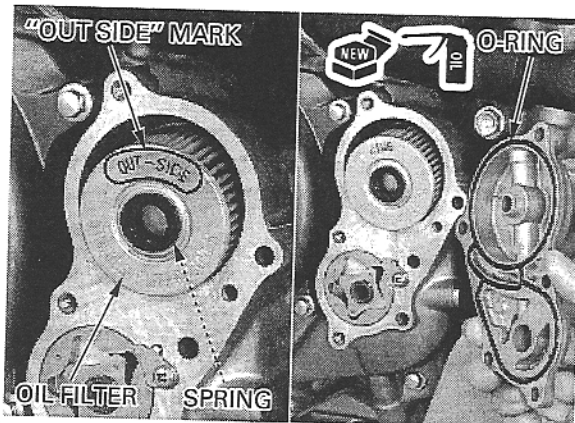

Install the oil filter cover and tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Fill to the filler neck with the correct quantity of the recommended engine oil.

Start the engine and check that there are no oil leaks.

Stop the engine and check the oil level (page 3-10).

