

### AIR CLEANER HOUSING REMOVAL/INSTALLATION

Remove the following:

- Right and left side covers (page 2-2).
- Air cleaner element (page 3-6).
- Sub-frame (page 2-5).

Remove the screws and mud guard.


Remove the bolts and air cleaner housing from the sub-frame.



Check the carburetor connecting tube to see if it is sealing properly at the air cleaner housing.  
Check the air cleaner housing for damage.

Remove the carburetor connecting tube from the air cleaner housing and seal thoroughly if any sign of inadequate sealing is detected.

Installation is in the reverse order of removal.

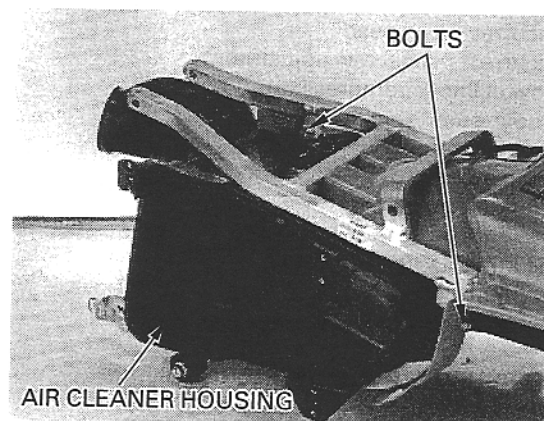

### CRANKCASE BREATHER

#### INSPECTION

Route the crankcase breather tube as shown.  
Check the crankcase breather tube for kinks or clogs.

