


Remove the main jet and jet holder.

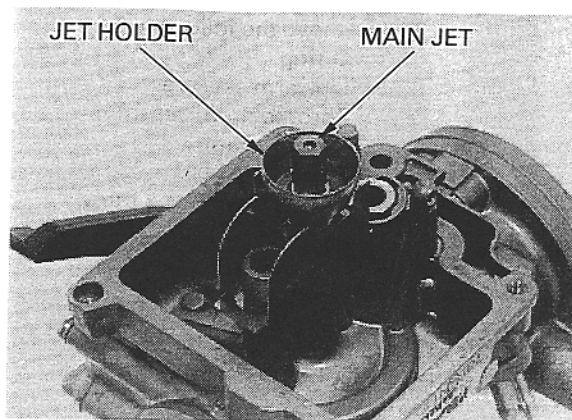

Remove the following:

- Needle jet holder
- Needle jet
- Screw and baffle plate

NOTE:

Before removing the pilot screw, turn it in, counting the number of turns until it seats lightly so you can return the pilot screw to its original position when reassembling.

CAUTION:

Damage to the pilot screw seat will occur if the pilot screw is tightened hard against the seat.



Remove the following:

- Slow jet
- Pilot screw
- Spring, washer and O-ring

Inspect the following:

Check the main jet and slow jet for clogs.
Check the pilot screw for damage.

Blow open all jets with compressed air.

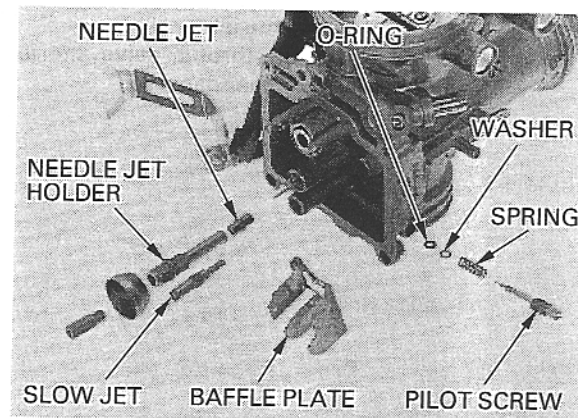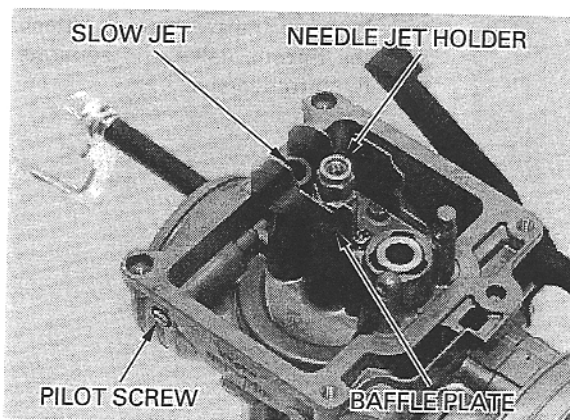

THROTTLE VALVE

Remove the screws and carburetor top cover.

