


Install and tighten the bolts securely.
Fill the system with the recommended coolant
(page 6-6).

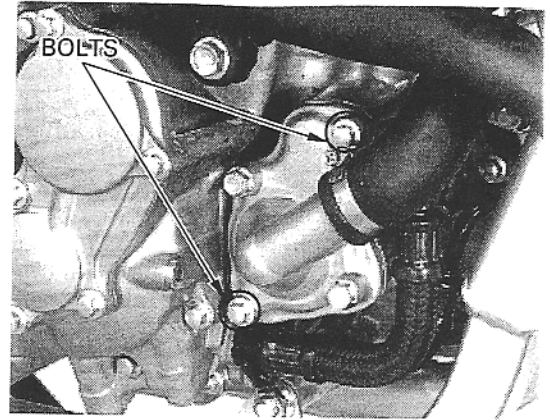

RADIATOR RESERVE TANK

REMOVAL/INSTALLATION

Remove the skid plate (page 2-11).

Place a suitable container under the radiator overflow tube joint of the reserve tank.

Remove the reserve tank mounting bolt.
Release the reserve tank tab from the frame hook and remove the reserve tank.
Disconnect the radiator siphon tube from the reserve tank.

Remove the reserve tank cap from the reserve tank and drain the coolant if necessary.

Installation is in the reverse order of removal.

