


CYLINDER HEAD COVER ASSEMBLY


Apply oil to the rocker arm-to-shaft sliding surface.
Apply molybdenum disulfide oil to the rocker arm
slipper and adjusting screw contact points.

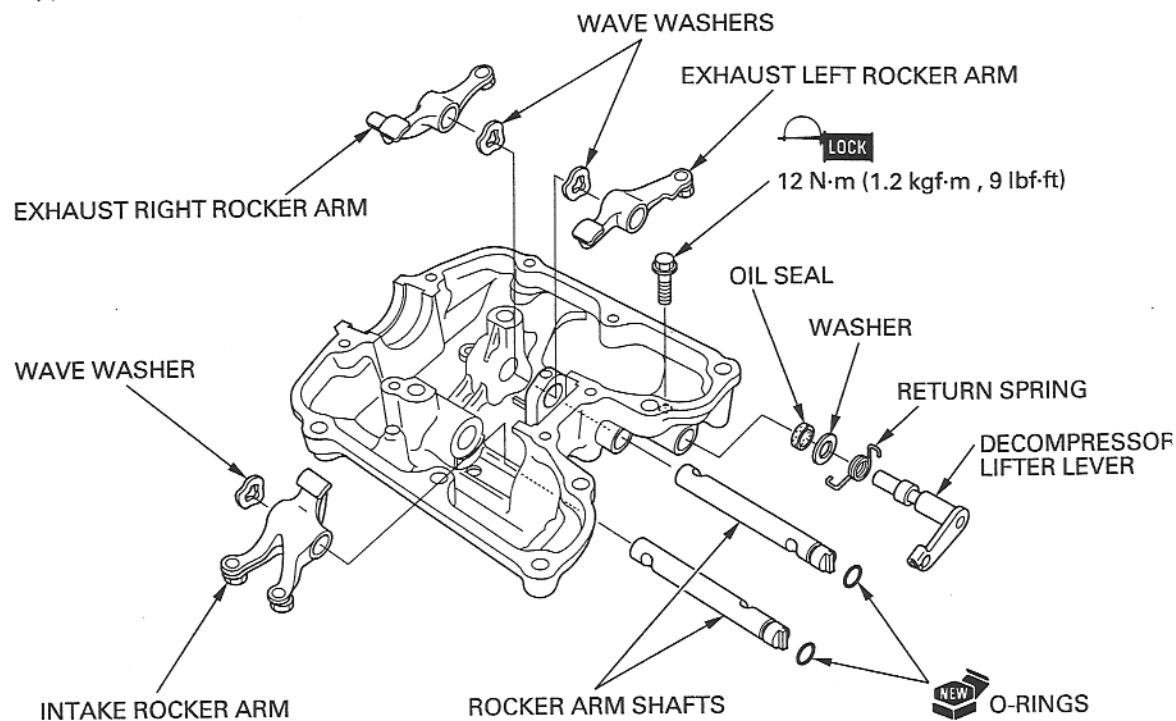

Install the rocker arms and then install the wave washers between the rocker arm-to-rocker arm holder "△" mark side.

NOTE:

Note the location of the exhaust left rocker arm with a decompression lug.

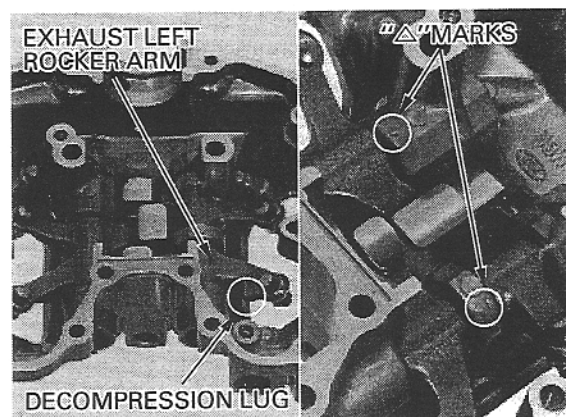

Coat the new O-rings with engine oil and install it to the rocker arm shafts.

Install the rocker arm shafts to the cylinder head cover.

Position the grooves in the rocker arm shafts vertically, aligning the bolt holes on the cylinder head.

