


CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE

CLUTCH CENTER

Check the clutch center for nicks, indentations or abnormal wear made by the clutch plates.

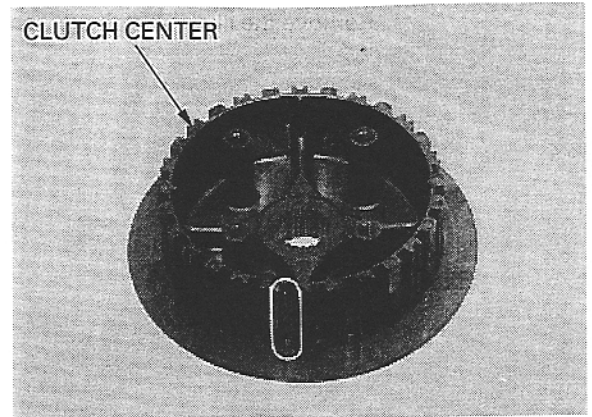


CLUTCH LIFTER ROD

Check the clutch lifter rod for damage, and straightness.


CLUTCH LIFTER ROD TIP

Check the clutch lifter rod tip for wear or damage.

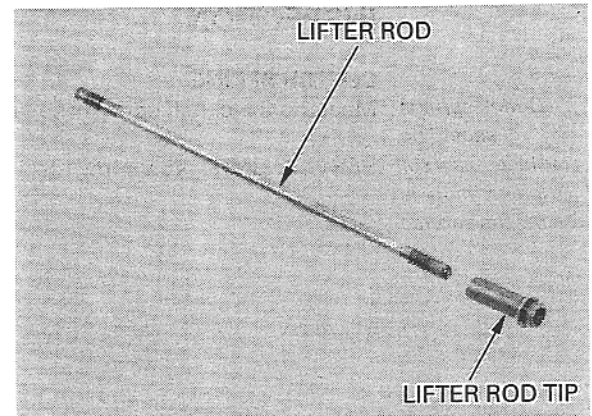

PRESSURE PLATE BEARING

Turn the inner race of the bearing with your finger. The bearing should turn smoothly and quietly.

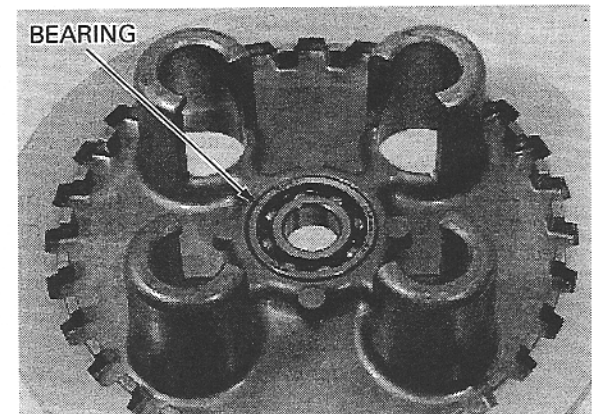

CLUTCH OUTER/OUTER GUIDE

Check the clutch outer for nicks, indentations or abnormal wear made by the clutch discs.

Check the serrated teeth of the primary driven gear for wear or damage.

Check the clutch outer guide for abnormal wear or damage.

Measure the I.D. of the clutch outer.

SERVICE LIMIT: 29.05 mm (1.144 in)

Measure the O.D. and I.D. of the clutch outer guide.

SERVICE LIMITS: O.D.: 28.91 mm (1.138 in)
I.D.: 22.05 mm (0.868 in)

