



CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE

Install the clutch pressure plate and bearing as a set.
Install the clutch springs and spring bolts.
Tighten the bolts in a crisscross pattern in 2 or 3 steps.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

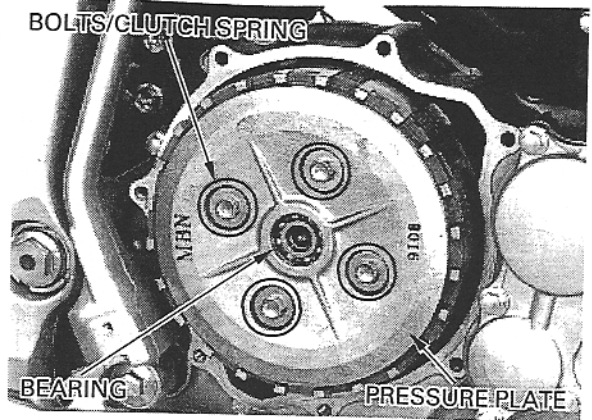


Check that the clutch cover O-ring is in good condition.
Apply oil to the O-ring and install the clutch cover.

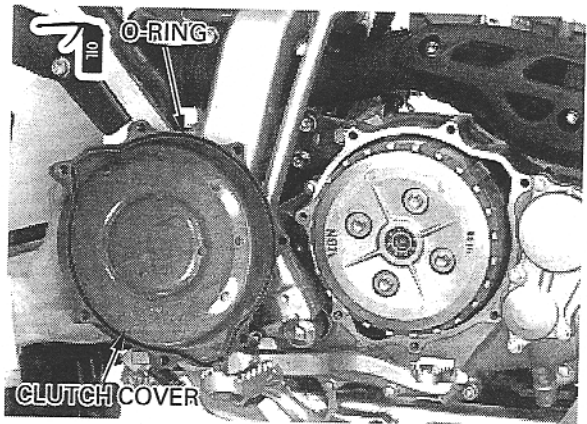

Install and tighten the clutch cover bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

After clutch system service, perform the clutch adjustment (page 3-21).
Check the oil level and fill the engine with the recommended engine oil as necessary (page 3-10).

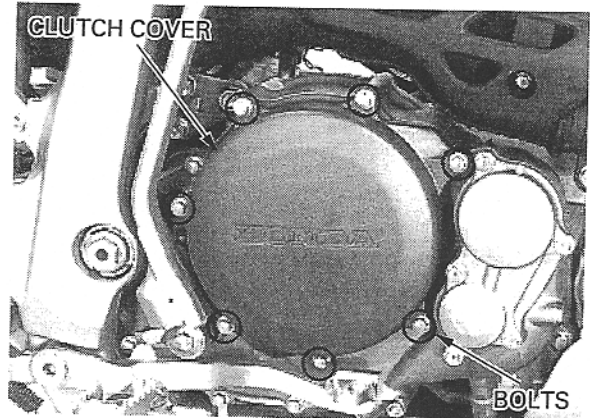

RIGHT CRANKCASE COVER REMOVAL

REMOVAL

Drain the engine oil (page 3-10).
Remove the skid plate (page 2-11).

Remove the bolts and right footpeg.
Remove the brake pedal pivot bolt and return spring.

