


## TRANSMISSION REMOVAL/ DISASSEMBLY


Separate the crankcase (section 12).

Remove the shift fork shaft.

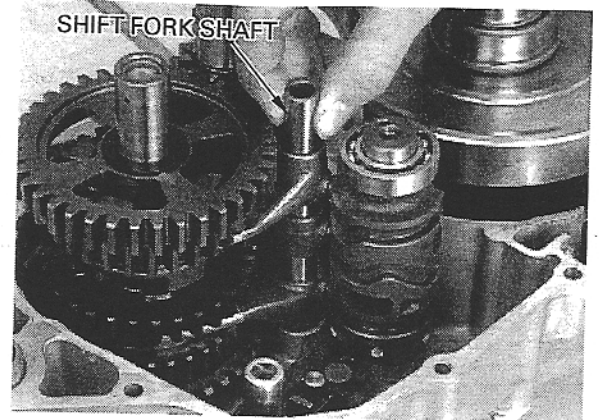


Pull the gearshift plate toward the spindle and remove the gearshift drum.

Remove the shift forks.

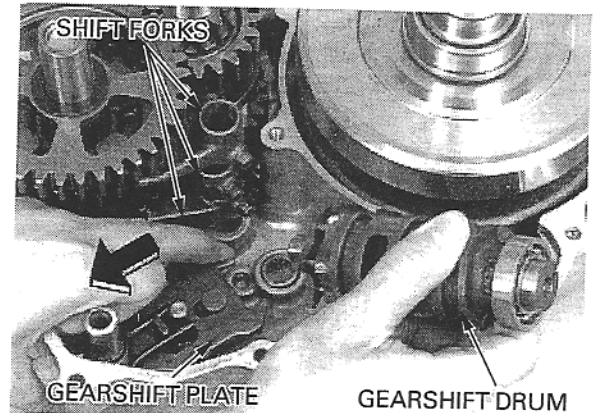

Remove the gearshift spindle.

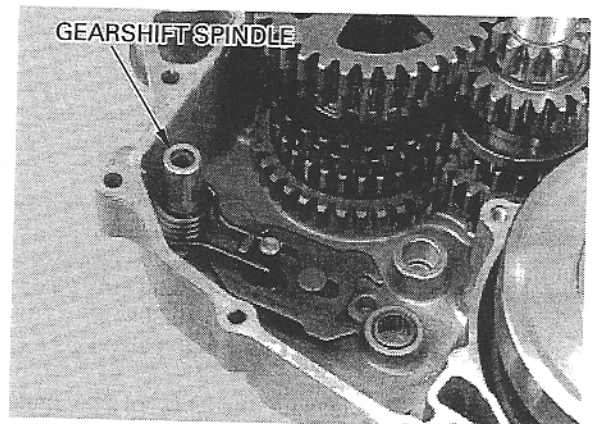

Remove the mainshaft and countershaft as an assembly.

