


FRONT WHEEL/SUSPENSION/STEERING

Always replace the bearings and bearing races as a set. Install a new lower outer race, bearing race installer and install shaft as shown. Hold the shaft with a wrench, turn the installer to install the lower outer race.

TOOLS:

Attachment, 42 × 47 mm	07746-0010300
Taper bearing installer	07VMF-KZ30100
Bearing installer shaft	07VMF-KZ30200

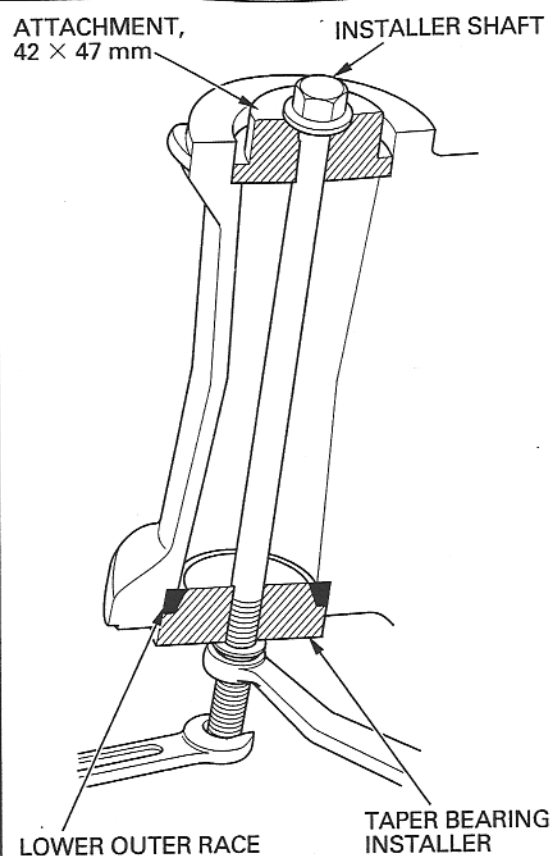

Install a new upper outer race, bearing race installer and install shaft as shown. Hold the shaft with a wrench, turn the installer to install the upper outer race.

TOOLS:

Attachment, 42 × 47 mm	07746-0010300
Taper bearing installer	07VMF-KZ30100
Bearing installer shaft	07VMF-KZ30200

