


FRONT WHEEL/SUSPENSION/STEERING

Apply grease to all of the bearing areas.

Install the upper tapered roller bearing in the steering head.

Slide the steering stem into the steering head from the bottom.

Install the dust seal.

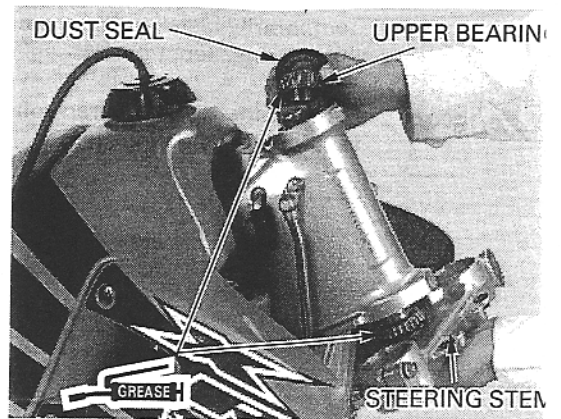


Install the steering head adjusting nut.

Tighten the steering head adjusting nut with the steering stem socket.


TORQUE: 29 N·m (3.0 kgf·m, 22 lbf·ft)

TOOL:

Steering stem socket 07916-KA50100

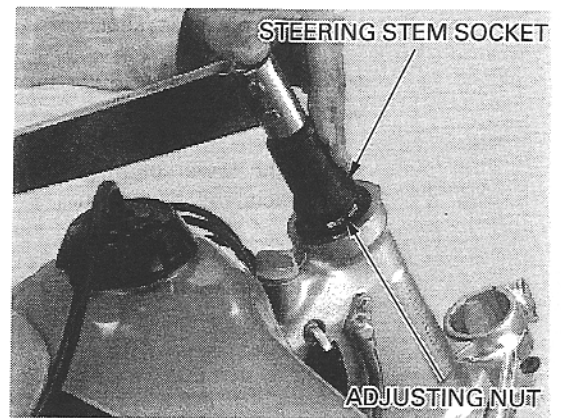

Turn the steering stem lock-to-lock enough times to seat the bearings.

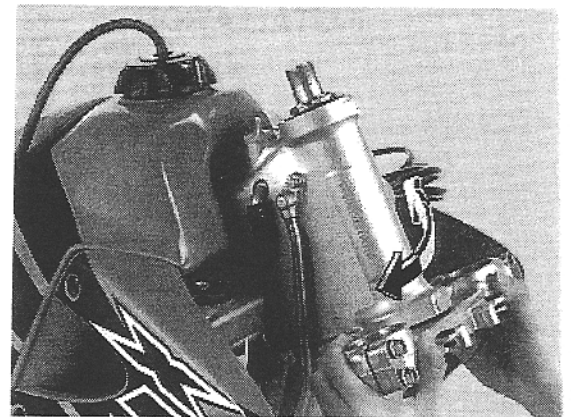

Loosen the adjusting nut to torque of 0 N·m (0 kgf·m, 0 lbf·ft), and retighten to the specified torque.

TORQUE: 8 N·m (0.8 kgf·m, 5.8 lbf·ft)

