


REAR WHEEL/SUSPENSION

Remove the upper mounting bolt/nut and shock absorber.

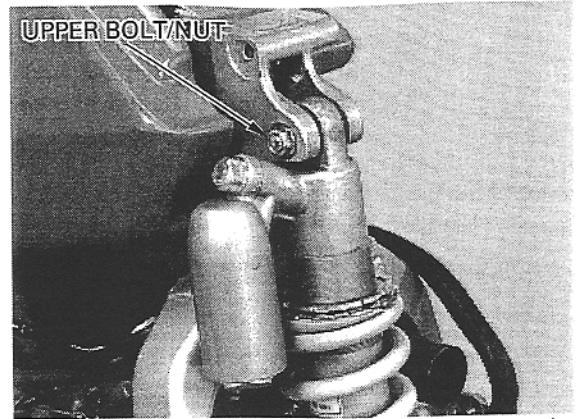

DISASSEMBLY

NOTE:

Measure the spring length for installation later.



Hold the shock absorber in a vise by the upper mount, protected on both sides by pieces of wood.

Loosen the lock nut and adjusting nut.

TOOLS:

Pin spanner 07702-0020001
(2 required)

Slide the rebound rubber upward and remove the spring seat and spring.

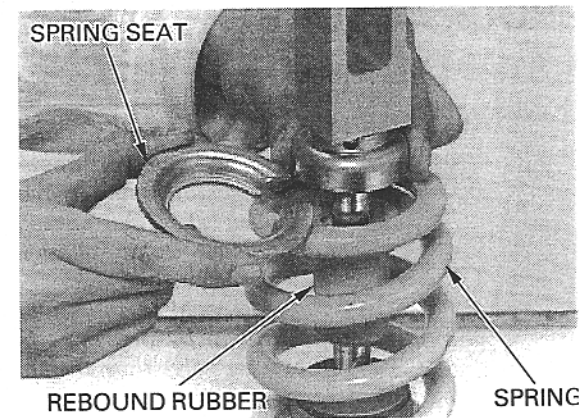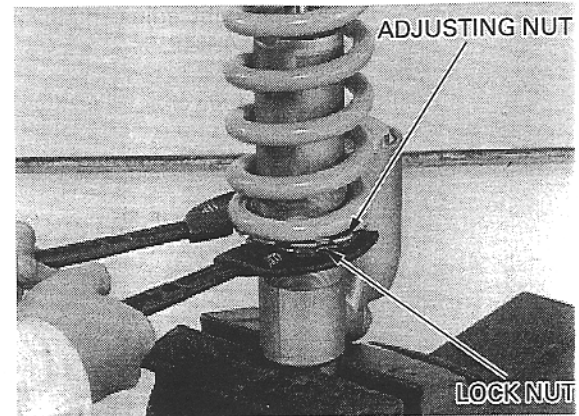

SHOCK ABSORBER SPRING INSPECTION

Measure the shock absorber spring free length.

SERVICE LIMIT: 240 mm (9.4 in)

