


REAR WHEEL/SUSPENSION

Install the lower mounting bolt aligning the cut out of the bolt with the stopper on the shock absorber lower mount.

Install and tighten the lower mounting nut.


TORQUE: 44 N·m (4.5 kgf·m , 33 lbf·ft)

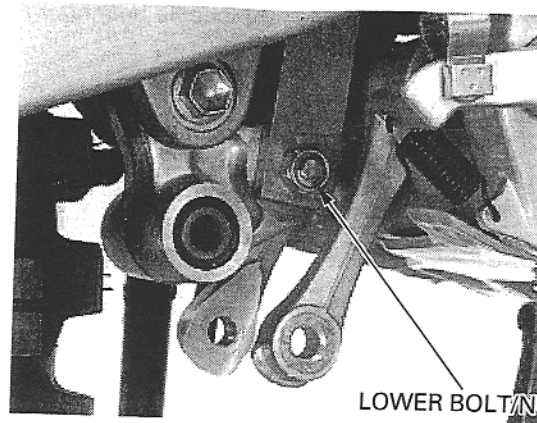

Install and tighten the shock link-to-shock arm bolt/nut.

TORQUE: 69 N·m (7.0 kgf·m , 51 lbf·ft)


Install the sub-frame (page 2-7).
Install the seat (page 2-2).

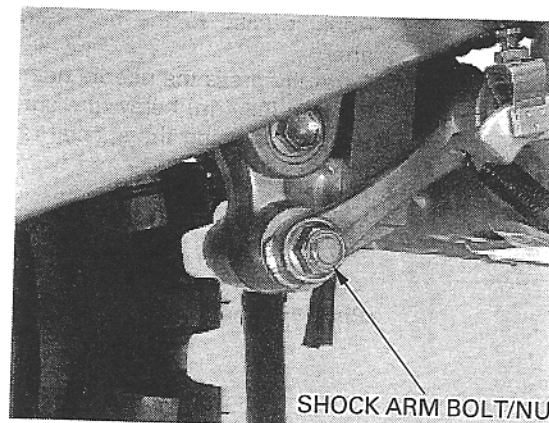

SHOCK LINKAGE

REMOVAL

Remove the side stand mounting bolts and side stand.

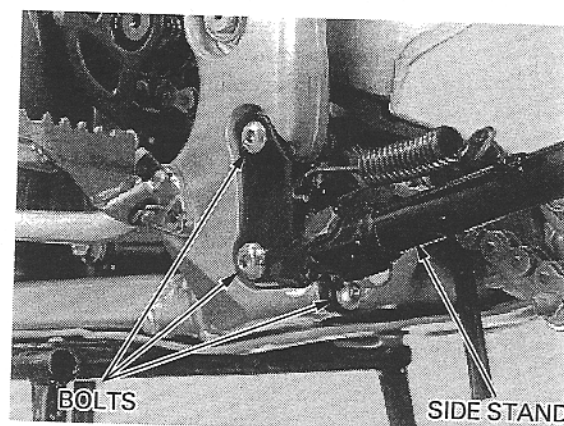

Remove the shock arm bolt/nut (shock link side).

