


Remove the swingarm pivot bolt.

Remove the swingarm pivot lock nut, and then remove the adjusting nut using special tools.

TOOLS:

Lock nut wrench 07KMA-KAB0100
Lock nut wrench, 20 mm 07VMA-MBB0100


Remove the swingarm.

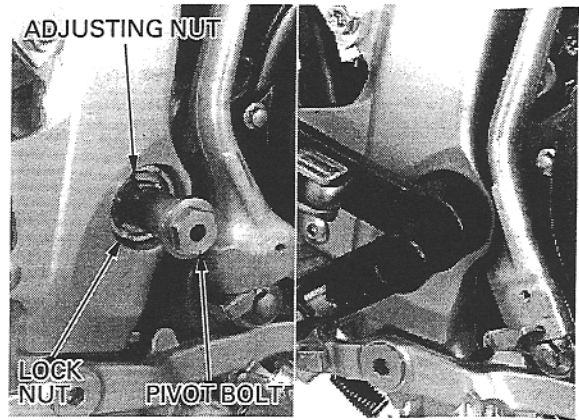

Check the chain slider for wear or damage (page 3-18).

DISASSEMBLY

Remove the screws and chain slider.

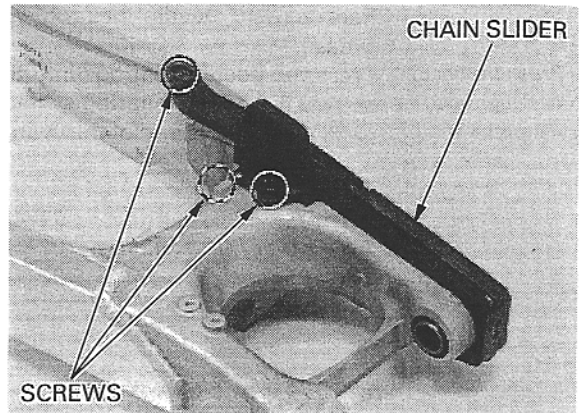

Remove the following:


- Dust seal caps
- Pivot collars
- Dust seals

Check the dust seals and collars for wear, damage or fatigue.

Check the needle bearings for damage or loose fit.

Check the swingarm for cracks or damage.

Replace them, if necessary.

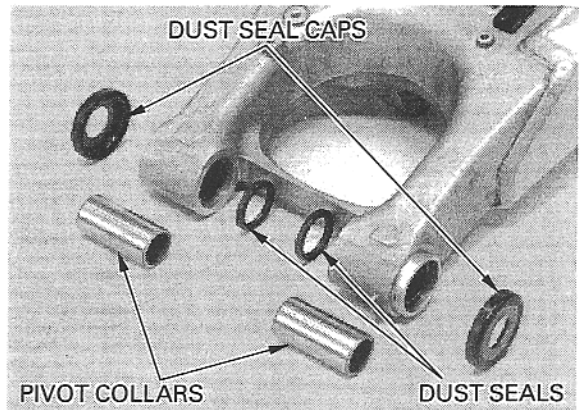

BEARING REPLACEMENT

Press the needle bearings out of the swingarm using special tools and a hydraulic press.

TOOLS:

Driver 07949-3710001
Attachment, 28 × 30 mm 07946-1870100
Pilot, 25 mm 07746-0040600

