


FRONT:


Install the diaphragm and reservoir cover.
Tighten the reservoir cover screws to the specified torque.

TORQUE: 2 N·m (0.2 kgf·m , 1.4 lbf·ft)

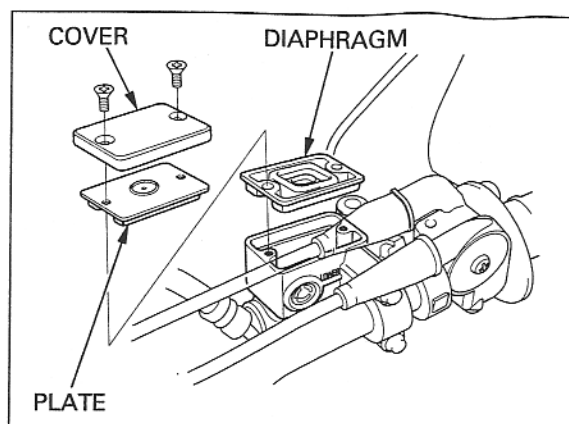

REAR:

Install the diaphragm, set plate and reservoir cap.
Install the reservoir and tighten the bolt securely.

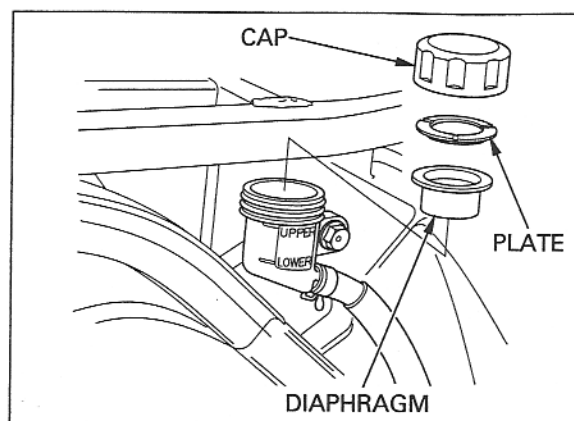

BRAKE PAD/DISC

BRAKE PAD REPLACEMENT

⚠ WARNING

A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

Push the caliper pistons all the way in to allow installation of new brake pads.

NOTE:

Check the brake fluid level in the brake master cylinder reservoir as this operation causes the level to rise.

Remove the pad pin plug and loosen the pad pin.

