

HYDRAULIC BRAKE

Install the reservoir hose joint to the rear master cylinder.

Install the snap ring using a special tool.


CAUTION:

Be certain the snap ring is firmly seated in the groove.

TOOL:


Snap ring pliers

07914-SA50001

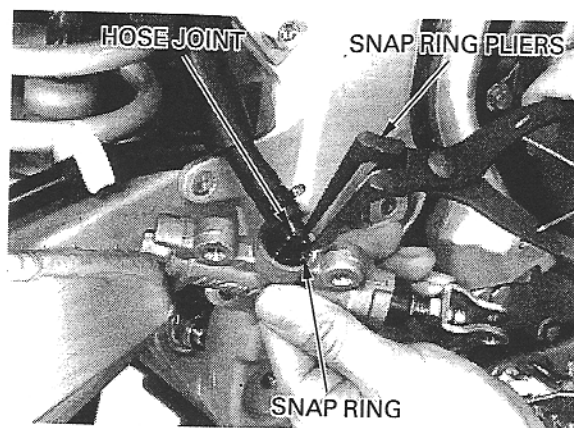

Install the rear master cylinder and tighten the mounting bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

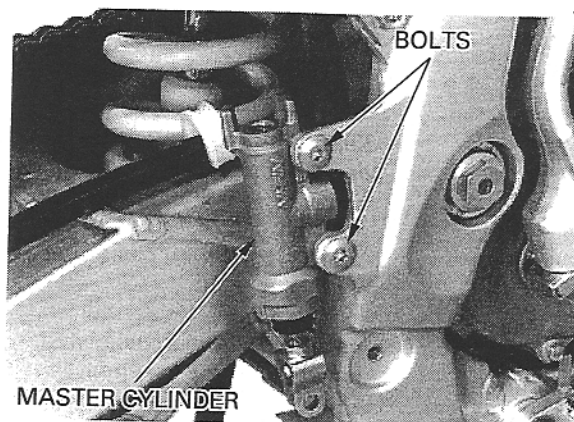


Install the brake hose with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Install the brake pedal (page 16-19).

Fill the reservoir to the upper level and bleed the brake system (page 16-3).

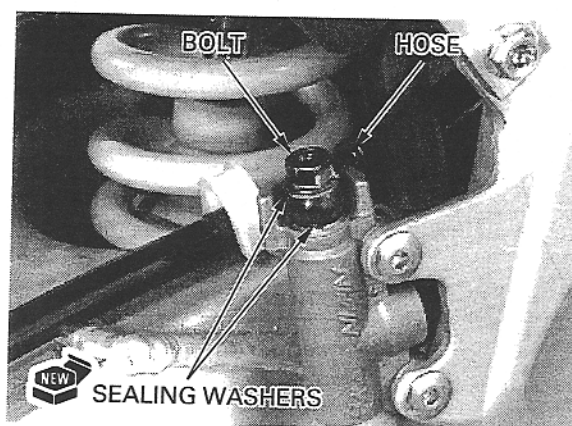

FRONT BRAKE CALIPER

REMOVAL

CAUTION:

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Drain the front brake hydraulic system (page 16-3).
Remove the brake pads (page 16-5).

Remove the oil bolts, sealing washers and brake hose eyelet joint.

