


Push the dust seal and piston seal in and lift them out.

CAUTION:

Be careful not to damage the piston sliding surface.

Clean the seal grooves, caliper piston and caliper piston sliding surface with clean brake fluid.

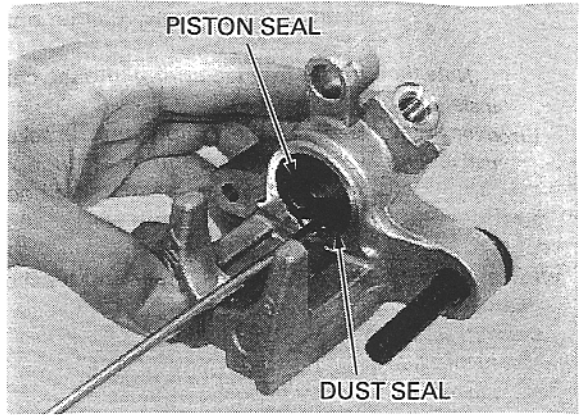


INSPECTION

Check the caliper cylinder and piston for scoring, scratches or damage.


Measure the caliper cylinder I.D.

SERVICE LIMIT: 27.06 mm (1.065 in)

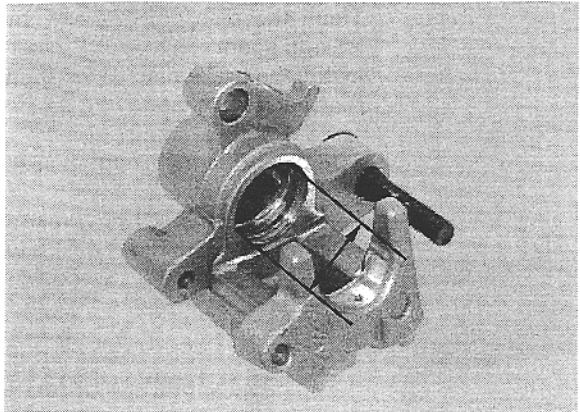

Measure the caliper piston O.D.

SERVICE LIMIT: 26.89 mm (1.059 in)

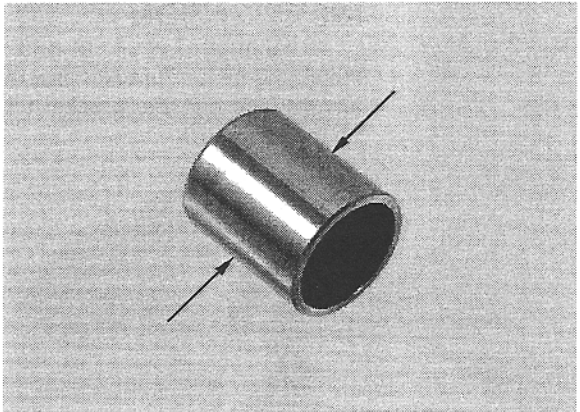

ASSEMBLY

NOTE:

Be sure that each part is free from the dust or dirt before reassembly.

Apply silicone grease to the boot inner surface.
 Coat a new piston seal and dust seal with clean brake fluid.
 Install the new piston seal and dust seal into the groove of the caliper body.
 Coat a caliper piston with clean brake fluid and install it into the caliper cylinder with their open end facing the pad.

