


Contact Breaker Point Adjustment

1. Remove the point and dynamo covers.
2. Open the contact breaker points ① with your finger or small screw driver blade and examine for pitting. If pitted or burned, the points should be replaced and the condenser checked. A gray discoloration is normal and can be removed with a point file. Filing should be done carefully and kept to a minimum. Clean the point contacts after filing with a clean piece of unwaxed paper such as a business card or chemical point cleaner.
3. Rotate the dynamo rotor in the counterclockwise direction to find the point where the breaker point gap is at maximum and then check the opening using a feeler gauge.
4. The standard gap is **0.012~0.016 in. (0.3~0.4 mm)**.
5. When adjustment is necessary, loosen the contact breaker plate locking screws

② and move the contact breaker plate to achieve correct gap. When properly gapped, retighten the locking screws.

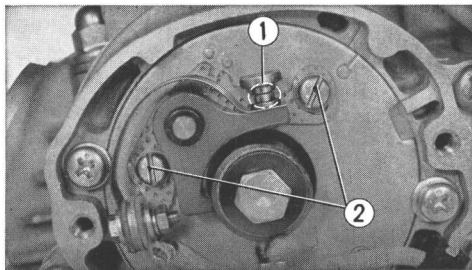

- ① Contact breaker points
② Contact breaker locking screws