

3. Compress the front forks several times, then tighten the axle clamp bolt (7) to the specified torque.

Clamp bolt torque:

2.3–2.8 kg-m (17–20 ft-lbs)


4. Check the brake adjustment.
5. Apply the brakes several times and check for free wheel rotation.

CAUTION

- * Always replace used cotter pins with new ones.

WARNING

- * If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

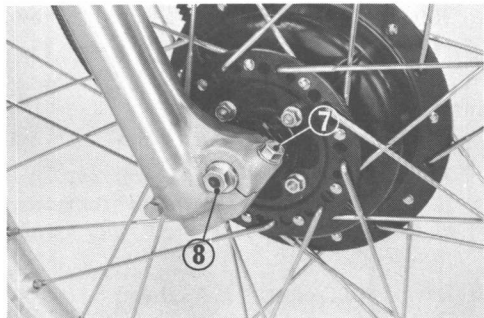

(7) Clamp bolt (8) Axle