


Ignition timing:

Do not perform this operation until point gap has been adjusted.

1. Rotate the generator rotor counterclockwise and align the "F" mark (2) to the index mark (1). At this time, the contact breaker points (3) should just start to open.
2. To adjust, loosen the two base plate locking screws (4) and move the base plate (5). Moving the plate clockwise will advance the timing.

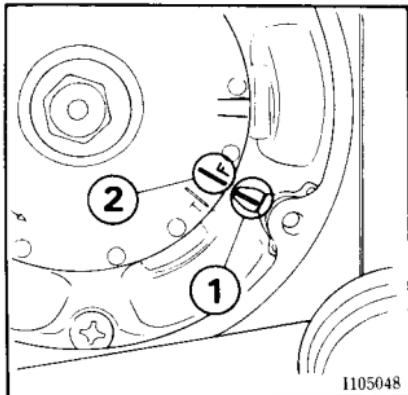

Ajuste de distribución del encendido:

No efectue esta operación antes de ajustar la distancia.

1. Haga girar el rotor del generador a la izquierda y alinee la marca "F" (2) con la marca de índice (1). En este momento, los puntos de contacto del ruptor (3) deberán comenzar a abrirse.
2. Para ajustarlo, afloje los dos tornillos (4) que fijan la placa de base y desmonte la placa de base (5). Girando la placa a la derecha, adelantará el tiempo de encendido.

